

OPTIBAR DP 7060 C Technical Datasheet

Differential pressure transmitter for measuring flow, level, differential pressure, density and interface

- High accuracy and measurement stability under all process conditions
- Fast response time
- Modular converter platform for all applications



1.1 OPTIBAR differential pressure transmitter 3 1.2 Options 4 1.3 Measuring principle 7 2 Technical data 8 2.1 Technical data 8 2.1 Technical data 8 2.2 Dimensions and weights 44 2.3 Pressure ranges 20 2.4 Dynamic output behaviour 21 3 Installation 22 3.1 Intended use 22 3.2 Installation specifications 22 3.3 Venting 23 3.4 Measurement setup for flow measurement 24 3.4.1 In gases and liquids with solids content 24 3.5.2 In closed vessels with impulse line 26 3.5.2 In closed vessels with impulse line 26 3.5.2 In closed vessels with liquid / condensate filled impulse lines 27 3.5.3 In closed vessels with liquid / condensate filled impulse lines 26 3.5.2 In closed vessels with liquid / condensate filled impulse lines 27 3.5.3 In closed vessels with liquid / condensate filled impulse lines 27 3.5.2 In closed vessels with liquid / condensate filled impulse lines 28 4 Electrical connections 29 <t< th=""><th>1</th><th>Product features</th><th>3</th></t<>	1	Product features	3
1.3 Measuring principle 7 2 Technical data 8 2.1 Technical data 8 2.2 Dimensions and weights 14 2.3 Pressure ranges 20 2.4 Dynamic output behaviour 21 3 Installation 22 3.1 Intended use 22 3.2 Installation specifications 22 3.4 Measurement setup for flow measurement 24 3.4.1 In gases and liquids with solids content 24 3.5.1 In open vessels with inguise line 26 3.5.2 In closed vessels with gas-filled impulse lines 27 3.5.3 In closed vessels with inguid / condensate filled impulse lines 27 3.5.3 In closed vessels with inguid / condensate filled impulse lines 29 4.1 Safety instructions 29 4.2 Laying electrical cables correctly 30 4.2.2 Laying electrical cables correctly 33 4.3.3 Connection to the power supply 33 4.3.4 Cable entry 1/2-14 NPT (female) 31 4.3.5 Connection in assignment 34 4.3.2 Connection in the terminal compartment 34 4.3.3 Double chamber housing 34 4.3.4 Double c		1.1 OPTIBAR differential pressure transmitter	3
2 Technical data 8 2.1 Technical data. 8 2.2 Dimensions and weights 14 2.3 Pressure ranges 20 2.4 Dynamic output behaviour. 21 3 Installation 22 3.1 Intended use 22 3.2 Installation specifications 22 3.4 Measurement setup for flow measurement. 23 3.4.1 In gases and liquids with solids content 24 3.4.2.1 Napours and pure liquids 25 3.5.5 Measurement setup for flew measurement. 26 3.5.1 In open vessels with impulse line. 26 3.5.2 In closed vessels with gas-filled impulse lines. 27 3.5.3 In closed vessels with liquid / condensate filled impulse lines. 27 3.5.3 In closed vessels with liquid / condensate filled impulse lines. 27 3.5.3 In closed vessels with liquid / condensate filled impulse lines. 27 4.2 Rotes for electrical cables 29 4.1 Safety instructions. 29 4.2 Rotes for electrical cables correctly. 30 4.2.2 Laying electrical cables correctly. 30 4.2.3 Cable preparation 31 4.2.4 Cable entry 1/2-14 NPT (fematel)			
2.1 Technical data 8 2.2 Dimensions and weights 14 2.3 Pressure ranges 20 2.4 Dynamic output behaviour 21 3 Installation 22 3.1 Intended use 22 3.2 Installation specifications 22 3.3 Venting 23 3.4 Measurement setup for flow measurement 24 3.4.1 In gases and liquids with solids content 24 3.4.2 In vapours and pure liquids 25 3.5 Measurement setup for level measurement 26 3.5.1 In open vessels with impulse lines 26 3.5.2 In closed vessels with aga-filled impulse lines 27 3.5.3 In closed vessels with liquid / condensate filled impulse lines 27 3.5.3 In closed vessels with liquid / condensate filled impulse lines 29 4.1 Safety instructions 29 4.2 Requirements for signal cables provided by the customer 20 4.2 Cable preparation 30 4.2.3 Cable preparation 30 4.2.4 Cable entry 1/2-1X NPT (female) 31 4.2.5 Connector pin assignment 33 4.3.1 Connection to the power supply 33 4.3.2 Sing		1.3 Measuring principle	7
2.2 Dimensions and weights 14 2.3 Pressure ranges 20 2.4 Dynamic output behaviour. 21 3 Installation 22 3.1 Intended use 22 3.2 Installation specifications 22 3.3 Venting 23 3.4 Measurement setup for flow measurement 24 3.4.1 In gases and liquids with solids content 24 3.4.2 In vapours and pure liquids 25 3.5 Measurement setup for level measurement 26 3.5.1 In open vessels with impulse line 26 3.5.2 In closed vessels with gas-filled impulse lines 27 3.5.3 In closed vessels with liquid / condensate filled impulse lines 29 4.1 Safety instructions 29 4.2 Requirements for signal cables provided by the customer 30 4.2.1 Requirements for signal cables provided by the customer 30 4.2.2 Cable preparation 30 4.2.3 Connector pin assignment 31 4.2.4 Cable entry 1/2-14 NPT [female] 31 4.2.5 Connector in to the power supply 33 4.3.4 Double chamber housing 35 4.3.5 Lectrical connection 34	2	Technical data	8
2.3 Pressure ranges 20 2.4 Dynamic output behaviour. 21 3 Installation 22 3.1 Intended use 22 3.2 Installation specifications 22 3.3 Venting 23 3.4 Measurement setup for flow measurement 24 3.4.1 In gases and liquids with solids content 24 3.4.2 In vapours and pure liquids 25 3.5.5 Measurement setup for level measurement 26 3.5.1 In open vessels with impulse line 26 3.5.3 In closed vessels with gas-filled impulse lines 27 3.5.3 In closed vessels with liquid / condensate filled impulse lines 27 3.5.3 In closed vessels with liquid / condensate filled impulse lines 27 3.5.4 Closed vessels with liquid / condensate filled impulse lines 27 4.1 Safety instructions 29 4.2 Notes for electrical cables correctly 30 4.2.3 Cable preparation 30 4.2.4 Cable entry 1/2-14 NPT [female] 31 4.2.5 Connector pin assignment 31 4.2.6 Connection to the power supply 33 4.3.1 Connection 34 4.3.1 Connection in the terminal compartment 3		2.1 Technical data	
2.4 Dynamic output behaviour. 21 3 Installation 22 3.1 Intended use 22 3.2 Installation specifications 22 3.3 Venting 23 3.4 Measurement setup for flow measurement 24 3.4.1 In gases and liquids with solids content 24 3.4.2 In vapours and pure liquids 25 3.5 Measurement setup for level measurement 26 3.5.1 In open vessels with impulse line 26 3.5.2 In closed vessels with gas-filled impulse lines 27 3.5.3 In closed vessels with liquid / condensate filled impulse lines 28 4 Electrical connections 29 4.1 Safety instructions 29 4.2 Notes for electrical cables 29 4.2.1 Requirements for signal cables provided by the customer 30 4.2.2 Laying electrical cables 29 4.2.3 Cable preparation 31 4.2.5 Connection to the power supply 33 4.2.6 Connection in the terminal compartment 34 4.3.1 Connection in the terminal compartment 34 4.3.2 Single chamber housing 35 4.3.3 Double chamber housing Ex d ia 37			
3 Installation 22 3.1 Intended use 22 3.2 Installation specifications 22 3.3 Venting 23 3.4 Measurement setup for flow measurement 24 3.4.1 In gases and liquids with solids content 24 3.4.2 In vapours and pure liquids 25 3.5 Measurement setup for level measurement 26 3.5.1 In open vessels with mpulse lines 27 3.5.3 In closed vessels with liquid / condensate filled impulse lines 28 4 Electrical connections 29 4.1 Safety instructions 29 4.2 Notes for electrical cables 29 4.2 Notes for electrical cables correctly 30 4.2.2 Laying electrical cables correctly 30 4.2.3 Cable preparation 30 4.2.4 Cable entry 1/2-14 NPT (female) 31 4.2.5 Connector pin assignment 31 4.2.6 Connection to the power supply 32 4.3.1 Connection in the terminal compartment 34 4.3.2 Single chamber housing 33 4.3.3 Double chamber housing Ex dia 37 5 Order information 38 5.1 Order code 38			
3.1 Intended use 22 3.2 Installation specifications 22 3.3 Venting 23 3.4 Measurement setup for flow measurement 24 3.4.1 In gases and liquids with solids content 24 3.4.2 In vapours and pure liquids 25 3.5 Measurement setup for level measurement 26 3.5.1 In open vessels with impulse line 26 3.5.2 In closed vessels with gas-filled impulse lines 27 3.5.3 In closed vessels with liquid / condensate filled impulse lines 28 4 Electrical connections 29 4.1 Safety instructions 29 4.2 Notes for electrical cables correctly 30 4.2.3 Cable preparation 30 4.2.3 Cable preparation 30 4.2.4 Cable entry 1/2-14 NPT (female) 31 4.2.5 Connector pin assignment. 31 4.2.6 Connection 33 4.3.1 Connection in the terminal compartment 34 4.3.2 Single shield and grounding 33 4.3.3 Double chamber housing 35 4.3.4 Double chamber housing 35 4.3.5 Order information 38 5.1 Order code 38		2.4 Dynamic output behaviour	
3.2 Installation specifications 22 3.3 Venting 23 3.4 Measurement setup for flow measurement 24 3.4.1 In gases and liquids with solids content 24 3.4.2 In vapours and pure liquids 25 3.5 Measurement setup for level measurement 26 3.5.1 In open vessels with impulse line 26 3.5.2 In closed vessels with gas-filled impulse lines 27 3.5.3 In closed vessels with liquid / condensate filled impulse lines 28 4 Electrical connections 29 4.1 Safety instructions 29 4.2 Notes for electrical cables 29 4.2.1 Requirements for signal cables provided by the customer 30 4.2.2 Laying electrical cables correctly 30 4.2.3 Cable preparation 30 4.2.4 Cable entry 1/2-14 NPT (female) 31 4.2.5 Connector pin asignment 31 4.2.6 Connection to the power supply 33 4.3 Connection in the terminal compartment 34 4.3.1 Connection in the terminal compartment 34 4.3.2 Single chamber housing 35 4.3.3 Double chamber housing Ex d ia 37 5 Order information	3	Installation	22
3.2 Installation specifications 22 3.3 Venting 23 3.4 Measurement setup for flow measurement 24 3.4.1 In gases and liquids with solids content 24 3.4.2 In vapours and pure liquids 25 3.5 Measurement setup for level measurement 26 3.5.1 In open vessels with impulse line 26 3.5.2 In closed vessels with gas-filled impulse lines 27 3.5.3 In closed vessels with liquid / condensate filled impulse lines 28 4 Electrical connections 29 4.1 Safety instructions 29 4.2 Notes for electrical cables 29 4.2.1 Requirements for signal cables provided by the customer 30 4.2.2 Laying electrical cables correctly 30 4.2.3 Cable preparation 30 4.2.4 Cable entry 1/2-14 NPT (female) 31 4.2.5 Connector pin assignment 31 4.2.6 Connection to the power supply 33 4.3.1 Connection in the terminal compartment 34 4.3.2 Single chamber housing 35 4.3.3 Double chamber housing Ex d ia 37 5.1 Order code 38		3.1 Intended use	22
3.3 Venting 23 3.4 Measurement setup for flow measurement 24 3.4.1 In gases and liquids with solids content 24 3.4.2 In vapours and pure liquids 25 3.5 Measurement setup for level measurement 26 3.5.1 In open vessels with impulse line 26 3.5.2 In closed vessels with gas-filled impulse lines 27 3.5.3 In closed vessels with liquid / condensate filled impulse lines 28 4 Electrical connections 29 4.1 Safety instructions 29 4.2 Notes for electrical cables correctly 30 4.2.2 Laying electrical cables correctly 30 4.2.3 Cable preparation 30 4.2.4 Cable entry 1/2-14 NPT (female) 31 4.2.5 Connection to the power supply 33 4.3.4 Connection in the terminal compartment 34 4.3.1 Connection in the terminal compartment 34 4.3.2 Single chamber housing 35 4.3.3 Double chamber housing 35 4.3.4 Double chamber housing 36 4.3.5 Order information 38 5.1 Order code 38			
3.4 Measurement setup for flow measurement 24 3.4.1 In gases and liquids with solids content 24 3.4.2 In vapours and pure liquids 25 3.5 Measurement setup for level measurement 26 3.5.1 In open vessels with impulse line 26 3.5.2 In closed vessels with gas-filled impulse lines 27 3.5.3 In closed vessels with liquid / condensate filled impulse lines 28 4 Electrical connections 29 4.1 Safety instructions 29 4.2 Notes for electrical cables 29 4.2.1 Requirements for signal cables provided by the customer 30 4.2.2 Laying electrical cables correctly 30 4.2.3 Cable preparation 30 4.2.4 Cable entry 1/2-14 NPT (female) 31 4.2.5 Connector pin assignment 31 4.2.6 Connection to the power supply 33 4.3 Electrical connection 34 4.3.1 Connection in the terminal compartment 34 4.3.2 Single chamber housing 35 4.3.3 Double chamber housing 35 4.3.4 Double chamber housing Ex d ia 37 5.1 Order code 38		1	
3.4.1 In gases and liquids with solids content		5	
3.5 Measurement setup for level measurement 26 3.5.1 In open vessels with impulse line 26 3.5.2 In closed vessels with gas-filled impulse lines 27 3.5.3 In closed vessels with liquid / condensate filled impulse lines 28 4 Electrical connections 29 4.1 Safety instructions 29 4.2 Notes for electrical cables 29 4.2.1 Requirements for signal cables provided by the customer 30 4.2.2 Laying electrical cables correctly 30 4.2.3 Cable preparation 30 4.2.4 Cable entry 1/2-14 NPT (female) 31 4.2.5 Connector pin assignment 31 4.2.6 Connection to the power supply 33 4.3 Electrical connection 34 4.3.1 Connection in the terminal compartment 34 4.3.2 Single chamber housing 35 4.3.4 Double chamber housing Ex d ia 37 5 Order information 38 5.1 Order code 38			
3.5.1 In open vessels with impulse line. 26 3.5.2 In closed vessels with gas-filled impulse lines. 27 3.5.3 In closed vessels with liquid / condensate filled impulse lines. 28 4 Electrical connections 29 4.1 Safety instructions. 29 4.2 Notes for electrical cables 29 4.2 Notes for electrical cables 29 4.2.1 Requirements for signal cables provided by the customer 30 4.2.2 Laying electrical cables correctly. 30 4.2.3 Cable preparation 30 4.2.4 Cable entry 1/2-14 NPT (femate) 31 4.2.5 Connector pin assignment. 31 4.2.6 Connection to the power supply 33 4.3 Electrical connection 34 4.3.1 Connection in the terminal compartment 34 4.3.2 Single chamber housing 35 4.3.3 Double chamber housing 36 4.3.4 Double chamber housing Ex d ia 37 5 Order information 38 5.1 Order code 38			
3.5.2 In closed vessels with gas-filled impulse lines. 27 3.5.3 In closed vessels with liquid / condensate filled impulse lines. 28 4 Electrical connections 29 4.1 Safety instructions. 29 4.2 Notes for electrical cables 29 4.2.1 Requirements for signal cables provided by the customer 30 4.2.2 Laying electrical cables correctly. 30 4.2.3 Cable preparation 30 4.2.4 Cable entry 1/2-14 NPT (female) 31 4.2.5 Connector pin assignment. 31 4.2.6 Connection to the power supply 33 4.3 Electrical connection 34 4.3.1 Connection in the terminal compartment 34 4.3.2 Single chamber housing 35 4.3.4 Double chamber housing 36 4.3.4 Double chamber housing Ex d ia 37 5 Order information 38 5.1 Order code 38			
3.5.3 In closed vessels with liquid / condensate filled impulse lines 28 4 Electrical connections 29 4.1 Safety instructions 29 4.2 Notes for electrical cables 29 4.2.1 Requirements for signal cables provided by the customer 30 4.2.2 Laying electrical cables correctly 30 4.2.3 Cable preparation 30 4.2.4 Cable entry 1/2-14 NPT [female] 31 4.2.5 Connector pin assignment 31 4.2.6 Connection to the power supply 33 4.3 Electrical connection 34 4.3.1 Connection in the terminal compartment 34 4.3.2 Single chamber housing 35 4.3.4 Double chamber housing 36 4.3.4 Double chamber housing Ex d ia 37 5 Order information 38 5.1 Order code 38			
4 Electrical connections294.1 Safety instructions.294.2 Notes for electrical cables294.2.1 Requirements for signal cables provided by the customer.304.2.2 Laying electrical cables correctly.304.2.3 Cable preparation304.2.4 Cable entry 1/2-14 NPT (female)314.2.5 Connector pin assignment314.2.6 Connection to the power supply334.2.7 Cable shield and grounding334.3 Electrical connection344.3.1 Connection in the terminal compartment344.3.2 Single chamber housing354.3.3 Double chamber housing364.3.4 Double chamber housing Ex d ia375 Order information385.1 Order code38			
4.1 Safety instructions.294.2 Notes for electrical cables294.2.1 Requirements for signal cables provided by the customer304.2.2 Laying electrical cables correctly.304.2.3 Cable preparation304.2.4 Cable entry 1/2-14 NPT (female)314.2.5 Connector pin assignment314.2.6 Connection to the power supply334.2.7 Cable shield and grounding334.3 Electrical connection344.3.1 Connection in the terminal compartment344.3.2 Single chamber housing354.3.3 Double chamber housing364.3.4 Double chamber housing Ex d ia375 Order information385.1 Order code38		3.5.3 In closed vessels with liquid / condensate filled impulse lines	
4.2 Notes for electrical cables 29 4.2.1 Requirements for signal cables provided by the customer 30 4.2.2 Laying electrical cables correctly 30 4.2.3 Cable preparation 30 4.2.4 Cable entry 1/2-14 NPT (female) 31 4.2.5 Connector pin assignment 31 4.2.6 Connection to the power supply 33 4.2.7 Cable shield and grounding 33 4.3.1 Connection in the terminal compartment 34 4.3.2 Single chamber housing 35 4.3.3 Double chamber housing 36 4.3.4 Double chamber housing Ex d ia 37 5 Order information 38 5.1 Order code 38	4	Electrical connections	29
4.2 Notes for electrical cables 29 4.2.1 Requirements for signal cables provided by the customer 30 4.2.2 Laying electrical cables correctly 30 4.2.3 Cable preparation 30 4.2.4 Cable entry 1/2-14 NPT (female) 31 4.2.5 Connector pin assignment 31 4.2.6 Connection to the power supply 33 4.2.7 Cable shield and grounding 33 4.3.1 Connection in the terminal compartment 34 4.3.2 Single chamber housing 35 4.3.3 Double chamber housing 36 4.3.4 Double chamber housing Ex d ia 37 5 Order information 38 5.1 Order code 38		4.1 Safety instructions	
4.2.1 Requirements for signal cables provided by the customer304.2.2 Laying electrical cables correctly304.2.3 Cable preparation304.2.4 Cable entry 1/2-14 NPT (female)314.2.5 Connector pin assignment314.2.6 Connection to the power supply334.2.7 Cable shield and grounding334.3 Electrical connection344.3.1 Connection in the terminal compartment344.3.2 Single chamber housing354.3.3 Double chamber housing364.3.4 Double chamber housing Ex d ia375 Order information385.1 Order code38			
4.2.3 Cable preparation304.2.4 Cable entry 1/2-14 NPT (female)314.2.5 Connector pin assignment314.2.6 Connection to the power supply334.2.7 Cable shield and grounding334.3 Electrical connection344.3.1 Connection in the terminal compartment344.3.2 Single chamber housing354.3.3 Double chamber housing364.3.4 Double chamber housing Ex d ia375 Order information385.1 Order code38			
4.2.4 Cable entry 1/2-14 NPT (female) 31 4.2.5 Connector pin assignment. 31 4.2.6 Connection to the power supply 33 4.2.7 Cable shield and grounding 33 4.3 Electrical connection 34 4.3.1 Connection in the terminal compartment 34 4.3.2 Single chamber housing 35 4.3.3 Double chamber housing 36 4.3.4 Double chamber housing Ex d ia 37 5 Order information 38 5.1 Order code 38			
4.2.5 Connector pin assignment. 31 4.2.6 Connection to the power supply 33 4.2.7 Cable shield and grounding 33 4.3 Electrical connection 34 4.3.1 Connection in the terminal compartment 34 4.3.2 Single chamber housing 35 4.3.3 Double chamber housing 36 4.3.4 Double chamber housing Ex d ia 37 5 Order information 38 5.1 Order code 38			
4.2.6 Connection to the power supply 33 4.2.7 Cable shield and grounding 33 4.3 Electrical connection 34 4.3.1 Connection in the terminal compartment 34 4.3.2 Single chamber housing 35 4.3.3 Double chamber housing 35 4.3.4 Double chamber housing Ex d ia 37 5 Order information 38 5.1 Order code 38			
4.2.7 Cable shield and grounding 33 4.3 Electrical connection 34 4.3.1 Connection in the terminal compartment 34 4.3.2 Single chamber housing 35 4.3.3 Double chamber housing 35 4.3.4 Double chamber housing 36 4.3.4 Double chamber housing Ex d ia 37 5 Order information 38 5.1 Order code 38			
4.3 Electrical connection 34 4.3.1 Connection in the terminal compartment 34 4.3.2 Single chamber housing 35 4.3.3 Double chamber housing 36 4.3.4 Double chamber housing Ex d ia 37 5 Order information 38 5.1 Order code 38			
4.3.1 Connection in the terminal compartment 34 4.3.2 Single chamber housing 35 4.3.3 Double chamber housing 36 4.3.4 Double chamber housing Ex d ia 37 5 Order information 38 5.1 Order code 38			
4.3.2 Single chamber housing 35 4.3.3 Double chamber housing 36 4.3.4 Double chamber housing Ex d ia 37 5 Order information 38 5.1 Order code 38			
4.3.3 Double chamber housing 36 4.3.4 Double chamber housing Ex d ia 37 5 Order information 38 5.1 Order code 38			
4.3.4 Double chamber housing Ex d ia 37 5 Order information 38 5.1 Order code 38		5	
5.1 Order code			
	5	Order information	38
6 Notes 42		5.1 Order code	
	6	Notes	42

1.1 OPTIBAR differential pressure transmitter

The newest member of the KROHNE OPTIBAR family is unparalleled when it comes to versatility and robustness. The completely newly developed piezoresistive differential pressure measuring device provides not only the exact differential pressure under any operating conditions but also simultaneously measures the static pressure in the process line.

The extremely compact measuring cell has a robust and precise response to temperature changes and with step response times of just 125 ms, it provides enough measurements for reliable and stable process control.

Highlights

- Outstanding temperature stability even under harsh conditions.
- Very good repeatability and long-term stability of the measuring signal.
- Extremely quick step response times < 125 ms.
- Combined DP, SP and T measurements for maximum process reliability.
- Measuring ranges up to 30 mbar / 0.44 psi even without electronic spreading.
- Light, compact measuring cell with low weight.
- Turn down up to 100:1, higher on request.
- Universal modularity of the entire OPTIBAR process series.
- Quick start-up for all applications.
- Extensive diagnostic and parameterization functions on the display module or the user-friendly and free DTM.

Industries

- General process technology
- Power generation
- Chemicals
- Petrochemicals
- Environmental technology
- Water and wastewater

Applications

- Pressure monitoring of filters and pumps with overload protection of up to 160 bar / 2320 psi.
- Level measurements of liquids in pressurised vessels.
- Flow measurement of gases, vapours and liquids with differential pressure transmitters.
- Measurement of density and separating layers of liquids in tanks.

1.2 Options

The OPTIBAR process pressure series allows free choice of pressure sensors, process connections, electronics and housings - so that each device is perfectly adapted to each measuring task.



① The optional display and adjustment module make it possible to start-up the converter entirely on site. With double chamber housings it can be installed on the side or on the top.

② The converter can be configured using the optional display and adjustment module as well as by way of PACTwareTM via HART[®] or the optionally available USB module. Regardless of the selected option, user guidance and navigation are absolutely identical.

③ There are a variety of converters available and they can be used regardless of the housing or sensor selected. In addition to the standard configuration with 2-wire 4...20mA and superimposed HART[®] (Version 7) signal, Foundation Fieldbus and Profibus PA can be selected depending on the application.

④ Note that not all approvals are available with all housings.

(5) The OPTIBAR process pressure series comprises relative and absolute pressure sensors with metallic and ceramic measuring cells as well as a differential pressure measuring cell with metallic diaphragm for any application in industrial process measuring technology.



- Figure 1-1: Plastic housing

 Single chamber
- Double chamber

The plastic housing is cost-effective and features a low net weight. Converters can only be used in hazardous areas in intrinsically safe operation.



Figure 1-2: Aluminium housing

① Single chamber

2 Double chamber

The standard housing for all pressure transmitters – it is perfectly equipped for industrial use and can be used in hazardous areas for all protection types.

PRODUCT FEATURES

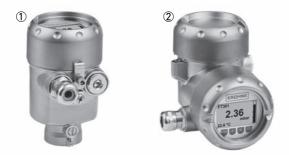


Figure 1-3: Stainless steel housing (precision casting)

① Single chamber

Double chamber

For applications that place particular demands on the mechanical robustness of the converter. These housings can be used with all protection types for hazardous areas.

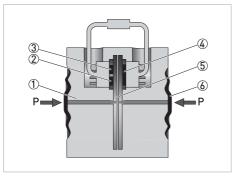


Figure 1-4: Stainless steel housing (electro-polished)

Single chamber

Recommended for applications requiring the corrosion resistance of stainless steel but not the mechanical robustness of a stainless steel precision casting housing. Also suitable for hygienic applications that require an IP69K protection class for steam jet cleanings. Converters can only be used in hazardous areas in intrinsically safe operation.

1.3 Measuring principle



- 1 Fill fluid
- Temperature sensor
- ③ Absolute pressure sensor
- ④ Differential pressure sensor
- ⑤ Overload system
- 6 Separating diaphragm

The process pressure is transferred via the separating metallic diaphragms (6) of the high and low pressure side and the fill fluid (1) to the piezoresistive silicon sensor. Through the prevailing pressure differential, the silicon diaphragm of the differential pressure sensor (4) is deflected and changes the resistance value of the four piezoresistive elements in the bridge circuit. The change in resistance of the bridge circuit is proportional to the differential pressure. Additionally, the measured cell temperature (2) and the prevailing static pressure (3) on the low pressure side is measured and then made available to the signal converter for further processing. If the measurement limit is exceeded, the overload system (5) restricts the prevailing process pressure at the differential pressure sensor and protects it from damage.

2.1 Technical data

- The following data is provided for general applications. If you require data that is more relevant to your specific application, please contact us or your local sales office.
- Additional information (certificates, special tools, software,...) and complete product documentation can be downloaded free of charge from the website (Download Center).

Measuring system

Measuring principle	Piezoresistive differential pressure cell
Application range	 Flow measurement (volume or mass flow) with corresponding differential pressure transmitter in gases, vapours and liquids Differential pressure measurement Interface and density measurement Level, volume and mass measurement of liquids
Measuring range	30 mbar16 bar / 0.44232 psi
Display and user interf	ace
Display on signal converter	 Dot-matrix display 45x27 mm / 1.77x1.06", illuminated Display turnable in 90° steps Digit size 13x7 mm / 0.51x0.27" Ambient temperatures below -20°C / -4°F may affect the readability of the display
Display function	 Measured value display or derived measured value such as filling height, density, interface position, volume or mass flow and total counter Warning and diagnostic information All parameters are accessible via the operating menu
Operating and display languages	German, English, French, Spanish, Portuguese, Italian, Dutch, Russian, Turkish, Polish and Czech
Operation	Local operation via 4 push buttons on the display and adjustment module
Remote operation	 PACTwareTM, incl. Device Type Manager (DTM) HART[®] Hand Held Communicator from Emerson Process AMS[®] from Emerson Process PDM[®] from Siemens
Integrated clock	
Date format	Day / Month / Year
Time format	12 hours / 24 hours
Time zone	CET (Factory setting)
Rate deviation	Maximum 10.5 minutes / year

Measuring accuracy

Differential pressure							
Reference conditions acc. to IEC 60770-1	 Ambient tempera Relative humidity Ambient pressure Mounting position Rising characteris Measurement sta Process diaphrag Fill fluid: silicone Material of proces Power supply: 24 Load for HART[®]: 2 	(constant): 45. e (constant): 86 h: vertical stics rt at 0.00 bar / m: 316 L / 1.44 oil ss flanges: 316 VDC ±3 VDC	75% 01060 psi 04) mbar / 12		osi	
Reference conditions acc. to DIN EN 61298	Includes the non-lin the digital interfaces 420 mA current of [% of the set span]	s (HART [®] , Prof	sis and ibus PA	repeatabil , Foundatio	ity under on Fieldbu	refere us) as	ence conditions Applies to well as for the analogue
		TD < 5:1	TD > 5	:1	TD < 10:	1	TD > 10:1
	30 mbar / 0.44 psi	< ±0.10%	< ± 0.0	02% x TD			
	100 mbar / 1.5 psi	-		-	< ±0.06	5%	<±-0.035% + 0.01% x TD
	500 mbar / 7.3 psi	-					<±0.015% + 0.005% x TD
	3 bar / 43.51 psi	-					
	16 bar / 232.1 psi	-					<±-0.035% + 0.01% x TD
Effect of ambient temperature	Ambient temperature effect on zero and span in relation to the set measuring span. Applies to the digital interfaces (HART [®] , Profibus PA, Foundation Fieldbus) as well as for the analogue 420 mA current output. [% of the set span]						
		up to TD	-10+	60°C / +14	+140°F		-40+85°C/-40+185°F
	30 mbar / 0.44 psi	30:1 <± 0.10% + 0.10% x TD <± 0.15		<± 0.15% + 0.15% x TD			
	100 mbar / 1.5 psi	100:1	<pre><± 0.15% + 0.15% > <± 0.08% + 0.05% ></pre>		.15% x TD)	<± 0.15% + 0.20% x TD
	500 mbar / 7.3 psi	_			.05% x TD)	<± 0.12% + 0.06% x TD
	3 bar / 43.51 psi						
	16 bar / 232.1 psi		<±	0.15% + 0.	015% x T[C	<± 0.15% + 0.20% x TD
Effect of system pressure	point errors can be o	calibrated out	under o	perating p	ressure. A	Applie	e set measuring span. Zero is to the digital interfaces gue 420 mA current
		up to nomina pressure	ι	on zero	C	on spa	In
	30 mbar / 0.44 psi	40 bar / 58) psi	<± 0.10%	x TD <	± 0.10	0%
	100 mbar / 1.5 psi	160 bar / 23	20 psi				
	500 mbar / 7.3 psi]					
	2 / / 2	1					
	3 bar / 43.51 psi						
	3 bar / 43.51 psi 16 bar / 232.1 psi	-					
Effect of mounting position		nt zero offset c	an be co	orrected.			

2 TECHNICAL DATA

acc. to DIN 16086 and IEC 60770-1	Applies to the digital interfaces (HART [®] , Profibus PA, Foundation Fieldbus) as well as for the analogue 420 mA current output. [% of the set span]					
	<0.1% x TD (Turn Do	wn) over a pe	riod of 5 years			
Total performance in accordance with	At a temperature change of -10+60°C / +14+140°F, up to the indicated nominal pressure. [% of the set span]					
DIN 16086		up to TD	Nominal pressure	-10+60°C / +14+140°F		
	30 mbar / 0.44 psi	1:1	40 bar / 580 psi	<± 0.24%		
	100 mbar / 1.5 psi	-	160 bar / 2320 psi	<± 0.32%		
	500 mbar / 7.3 psi	-		<± 0.18%		
	3 bar / 43.51 psi					
	16 bar / 232.1 psi	-		<± 0.32%		
	The details of total p temperature on the pressure on the mea	zero signal ar	nd the measuring span a	accuracy, the effect of the ambient is well as the effect of the static		
	$E_{\Delta TS}$ = Effect of ambi	ent temperat ent temperat tatic pressure	ure on the zero signal ure on the measuring sp e on the measuring spar			
Dynamic output	These parameters depend on the filling medium, temperature and, if applicable, the chemical seal. For more information refer to <i>Dynamic output behaviour</i> on page 21					
	seal.					
behaviour	seal. For more information	on refer to <i>Dy</i>		on page 21		
béhaviour Damping	seal. For more information	on refer to <i>Dy</i>	namic output behaviour	on page 21		
béhaviour Damping Temperature	seal. For more informatic 63% of the input var	on refer to <i>Dyn</i> iable 0999 s	namic output behaviour	on page 21		
béhaviour Damping Temperature The evaluation is made	seal. For more informatic 63% of the input var	on refer to <i>Dyn</i> iable 0999 s	namic output behaviour	on page 21		
béhaviour Damping Temperature The evaluation is made Resolution	seal. For more informatic 63% of the input var using the HART [®] outp	on refer to <i>Dyn</i> iable 0999 s	namic output behaviour	on page 21		
Damping Temperature The evaluation is made Resolution Accuracy System pressure	seal. For more informatic 63% of the input var using the HART [®] outp 1°C / 1.8°F	on refer to <i>Dyn</i> iable 0999 s	namic output behaviour	on page 21		
behaviour Damping Temperature The evaluation is made Resolution Accuracy	seal. For more informatic 63% of the input var using the HART [®] outp 1°C / 1.8°F ± 1°K • Ambient tempera • Relative humidity	ture (constant): 45 (constant): 8	namic output behaviour seconds, adjustable in 0. t]: +18+30°C / +64+8	on page 21 1 second steps. 6°F		
behaviour Damping Temperature The evaluation is made Resolution Accuracy System pressure Reference conditions	seal. For more informatic 63% of the input var using the HART [®] outp 1°C / 1.8°F ± 1°K Ambient tempera Relative humidity Ambient pressure Mounting position Includes the non-lin	ture (constant): 45 constant): 45 constant): 45 constant): 45 constant): 8 constant): 8 constant	t): +18+30°C / +64+8 575% 601060 mbar / 12.51 esis and repeatability ur	on page 21 1 second steps. 6°F 5.4 psi		
behaviour Damping Temperature The evaluation is made Resolution Accuracy System pressure Reference conditions acc. to IEC 60770-1 Reference accuracy	seal. For more informatic 63% of the input var using the HART [®] outp 1°C / 1.8°F ± 1°K Ambient tempera Relative humidity Ambient pressure Mounting position Includes the non-lin the digital interfaces	ture (constant): 45 constant): 45 constant): 45 constant): 45 constant): 8 constant): 8 constant	t): +18+30°C / +64+8 575% 601060 mbar / 12.51 esis and repeatability ur	on page 21 1 second steps. 6°F 5.4 psi ider reference conditions. Applies to eldbus) as well as for the analogue TD 1:1		
behaviour Damping Temperature The evaluation is made Resolution Accuracy System pressure Reference conditions acc. to IEC 60770-1 Reference accuracy	seal. For more informatic 63% of the input var using the HART [®] outp 1°C / 1.8°F ± 1°K Ambient tempera Relative humidity Ambient pressure Mounting position Includes the non-lin the digital interfaces	ture (constant): 45 constant): 45 constant): 45 constant): 45 constant): 8 constant): 8 constant	t): +18+30°C / +64+86 575% 601060 mbar / 12.51 esis and repeatability ur fibus PA, Foundation Fie RL] up to nominal pressure acc. to URL	on page 21 1 second steps. 6°F 5.4 psi der reference conditions. Applies to eldbus) as well as for the analogue TD 1:1		
behaviour Damping Temperature The evaluation is made Resolution Accuracy System pressure Reference conditions acc. to IEC 60770-1 Reference accuracy	seal. For more informatic 63% of the input var using the HART [®] outp 1°C / 1.8°F ± 1°K Ambient tempera Relative humidity Ambient pressure Mounting position Includes the non-lin the digital interfaces 420 mA current of	ture (constant): 45 constant): 45 constant): 45 constant): 45 constant): 8 constant): 8 constant	t): +18+30°C / +64+8 575% 601060 mbar / 12.51 esis and repeatability ur fibus PA, Foundation Fie RL] up to nominal pressure acc. to URL absolute pressure	6°F 5.4 psi der reference conditions. Applies to eldbus) as well as for the analogue		
behaviour Damping Temperature The evaluation is made Resolution Accuracy System pressure Reference conditions acc. to IEC 60770-1 Reference accuracy	seal. For more informatic 63% of the input var using the HART [®] outp 1°C / 1.8°F ± 1°K • Ambient tempera • Relative humidity • Ambient pressure • Mounting position Includes the non-lin the digital interfaces 420 mA current of 30 mbar / 0.44 psi	ture (constant): 45 constant): 45 constant): 45 constant): 45 constant): 8 constant): 8 constant	t): +18+30°C / +64+84 575% 601060 mbar / 12.51 esis and repeatability ur fibus PA, Foundation Fie RL] up to nominal pressure acc. to URL absolute pressure 40 bar / 580 psi	on page 21 1 second steps. 6°F 5.4 psi inder reference conditions. Applies to eldbus) as well as for the analogue TD 1:1		
behaviour Damping Temperature The evaluation is made Resolution Accuracy System pressure Reference conditions acc. to IEC 60770-1 Reference accuracy	seal. For more informatic 63% of the input var using the HART [®] outp 1°C / 1.8°F ± 1°K • Ambient tempera • Relative humidity • Ambient pressure • Mounting position Includes the non-lin the digital interfaces 420 mA current of 30 mbar / 0.44 psi 100 mbar / 1.5 psi	ture (constant): 45 constant): 45 constant): 45 constant): 45 constant): 8 constant): 8 constant	t): +18+30°C / +64+84 575% 601060 mbar / 12.51 esis and repeatability ur fibus PA, Foundation Fie RL] up to nominal pressure acc. to URL absolute pressure 40 bar / 580 psi	on page 21 1 second steps. 6°F 5.4 psi inder reference conditions. Applies to eldbus) as well as for the analogue TD 1:1		

Effect of ambient temperature	Ambient temperature effect on zero and span. [% of URL]			
		up to nominal pressure acc. to URL absolute pressure	-10+60°C / +14140°F	-40+80°C / -40+176°F
	30 mbar / 0.44 psi	40 bar / 580 psi	<±0.10%	<± 0.15%
	100 mbar / 1.5 psi	160 bar / 2320 psi		
	500 mbar / 7.3 psi			
	3 bar / 43.51 psi			
	16 bar / 232.1 psi			
Long-term stability acc. to DIN EN 61298-1	<± 0.1% of URL over	r a period of 5 years		

Operating conditions

Temperature	
Operating temperature / nominal temperature range	-40+80°C / -40+176°F
Ambient temperature	-40+80°C / -40+176°F
Storage temperature	-40+80°C / -40+176°F
Climate category	4K 4H (air temperature: -20+55°C, humidity: 4100% according to DIN EN 60721-3-4)

Further operating conditions

Ingress protection ac	c. to IEC 529 / EN 60529		
Plastic (PBT)	Single chamber	IP66 / IP67	NEMA 4X / 6P
	Double chamber	IP66 / IP67	NEMA 4X
Aluminium	Single chamber	IP66 / IP68 (0.2 bar / 2.9 psi)	NEMA 4X / 6P
		IP 68 (1 bar / 14.5 psi)	-
	Double chamber	IP66 / IP67	NEMA 4X
		IP66 / IP68 (0.2 bar / 2.9 psi)	NEMA 4X
Stainless steel	Single chamber	ІР69К	-
(electro-polished)	Single chamber	IP66 / IP68 (0.2 bar / 2.9 psi)	NEMA 4X / 6P
Stainless steel	Single chamber	IP66 / IP68 (0.2 bar / 2.9 psi)	NEMA 4X / 6P
(precision casting)		IP 68 (1 bar / 14.5 psi)	NEMA 4X
	Double chamber	IP66 / IP67	NEMA 4X
		IP66 / IP68 (0.2 bar / 2.9 psi)	NEMA 4X
Stainless steel	Sensor for external housing	IP 68 (25 bar / 362.6 psi)	-

2 TECHNICAL DATA

Vibration	Vibration		
Reference conditions	 Without mounting bracket Process flanges 316 L / 1.4404 PN 160 Single chamber housing, aluminium 		
Vibration resistance acc. to IEC 60770-1	1058 Hz, 0.35 mm 581000 Hz, 20 m/s ² 1 octave per minute, 10 cycles per axis		
Shock resistance acc. to IEC 60770-1	500 m/s ² , 6 ms 100 shocks per axis		
Noise acc. to IEC 60770-1	10200 Hz, 1 (m/s ²) ² /Hz 200500 Hz, 0.3 (m/s ²) ² /Hz 4 hours per axis		

Materials

Gaskets	
EPDM	-40+85°C / -40+185°F
FKM	-15+85°C / -4+185°F
PTFE	-40+85°C / -40+185°F
NBR	-25+85°C / -4+185°F
Filling oil	
Silicone oil	-40+85°C / -40+185°F
Wetted parts	
Process connection, screwed flange	316 L / 1.4404
Separating diaphragm	316 L / 1.4404
Drain and vent valves	316 L / 1.4404
Internal transmission fluid	Silicone oil
Non-wetted parts	
Electronics housing	Plastic PBT (Polyester), powder coated die-cast aluminium, 316 L / 1.4404
Housing cover sealing ring	Silicone (aluminium or plastic housing), NBR (stainless steel housing)
Inspection window in housing cover (display, adjustment module)	Polycarbonate (UL746-C listed)
Screws and bolts for the side flanges	PN 160: hexagon screw DIN 931 M8 x 90 A4 70, hexagon nut DIN 934 M8 A4 70
Grounding flange	316 Ti, 316 L / 1.4404

Process connection

Standard 1/4-18 NPT (female)

Electrical connections

Mechanical	Mechanical				
Cable gland	M20 x 1.5 mm				
Cable diameter	59 mm / 0.200.35" 612 mm / 0.240.47" 1014 mm / 0.390.55"				
Cable entry	Blind plug: M20 x 1.5 mm, 1/2-14 NPT				
1/2 NPT	Closing cap: M20 x 1.5 mm, 1/2-14 NPT				
	Connector option: M12 x 1, Harting HAN 7D,8D, 7/8 FF				
Core cross-section	Solid wire with cords: 0.2 mm2.5 mm ² / AWG 2414				
	Cord with wire end sleeve: 0.2 mm1.5 mm ² / AWG 2416				
Electrical					
Supply voltage	Non-Ex device: 9.635 VDC				
	Ex ia device: 9.630 VDC				
	Ex d device: 9.635 VDC				
	Ex ia d device: 1535 VDC				
Reverse polarity protection	Integrated				
Permissible residual ri	pple				
Non-Ex devices	for U _n 12 VDC (9.6 < UB < 14 VDC) \leq 0.7 V _{eff} (16400 Hz)				
Ex ia devices, Ex ia d devices	for U _n 24 VDC (18 < UB < 35 VDC) \leq 1.0 V _{eff} (16400 Hz)				
Load	R _{L,max} =(UB-9.6) / 22 mA				
Potential connection	Electronics: not electrically isolated				
in device	Ground terminal: galvanically connected with process connection				
Overvoltage category	111				
Protection class	11				


Inputs and outputs

Output signal	Output signal			
Output signal	420 mA / HART [®] version 7.3 3.820.5 mA (factory setting acc. to. NAMUR recommendation)			
Signal resolution	0.3 μΑ			
Error signal of current output (adjustable)	High alarm ≥21 mA Low alarm ≤3.6 mA, last valid measurement			
Max. output current	21.5 mA			
Boot-up current	\leq 10 mA for 5 ms after switching on, then \leq 3.6 mA			
Damping	0999 seconds, adjustable			

Approvals and certificates

CE	The device fulfils the statutory requirements of the EC directives. The manufacturer certifies that these requirements have been met by applying the CE marking.
Electromagnetic compatibility (EMC)	EMC conformity for EN 61326-1 (05/2006)
NAMUR	NE 21 - Electromagnetic compatibility of equipment NE 43 - Signal level for the failure information of digital transmitters NE 53 - Compatibility of field devices and display/adjustment components NE 107 - Self-monitoring and diagnosis of field devices
Classification according to Pressure Equipment Directive (PED 97/23/EC)	PN160 (MWP 2320 psi) - For gases of fluid group 1 and liquids of fluid group 1, the requirements are fulfilled according to article 3, paragraph 3 (sound engineering practice).

2.2 Dimensions and weights

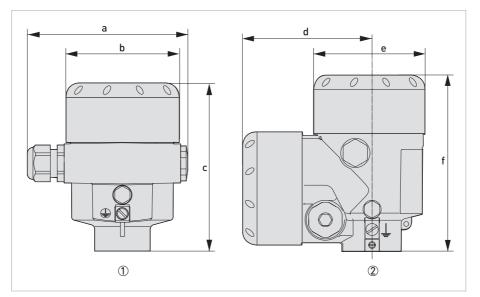



① Single chamber

Double chamber

	Dimension [mm]	Dimension [inch]
а	116	4.57
b	86	3.39
с	116	4.57
d	87	3.43
е	86	3.39
f	120	4.72

Housing version	Weight [kg]	Weight [lb]
Single chamber, aluminium	0.83	1.84
Double chamber, aluminium	1.24	2.73

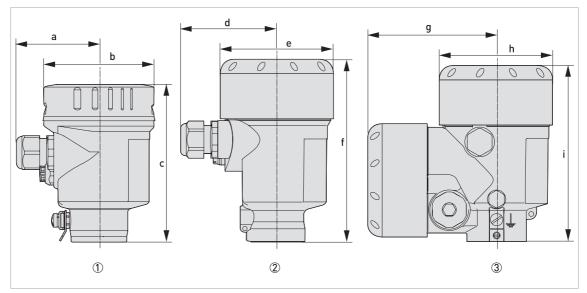


Figure 2-2: Stainless steel housing

Single chamber, stainless steel (electro-polished)
 Single chamber, precision casting
 Double chamber, precision casting

	Dimension [mm]	Dimension [inch]
а	59	2.32
b	80	3.15
с	112	4.41
d	69	2.72
е	79	3.11
f	117	4.61
g	87	3.42
h	79	3.11
i	120	4.72

Housing version	Weight [kg]	Weight [lb]
Single chamber, stainless steel (electro-polished)	0.73	1.61
Single chamber, precision casting	1.31	2.89
Double chamber, precision casting	2.86	6.31

Z TECHNICAL DATA

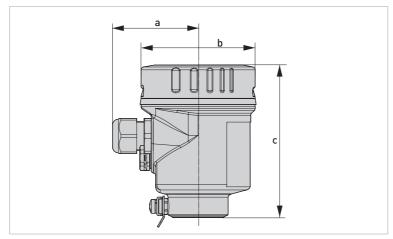


Figure 2-3: IP 69 K, stainless steel (electro-polished)

	Dimension [mm]	Dimension [inch]
а	59	2.32
b	80	3.15
С	104	4.10

Housing version	Weight [kg]	Weight [lb]
Single chamber, stainless steel (electro-polished)	0.73	1.61

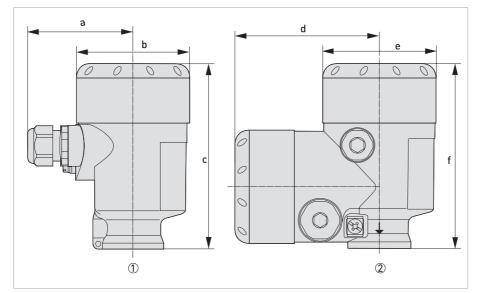


Figure 2-4: Plastic housing

- ① Single chamber
- Double chamber

	Dimension [mm]	Dimension [inch]
а	69	2.72
b	79	3.11
с	112	4.41
d	84	3.31
е	79	3.11
f	112	4.41

Housing version	Weight [kg]	Weight [lb]
Single chamber, plastic	0.40	0.88
Double chamber, plastic	0.51	1.13

2 TECHNICAL DATA

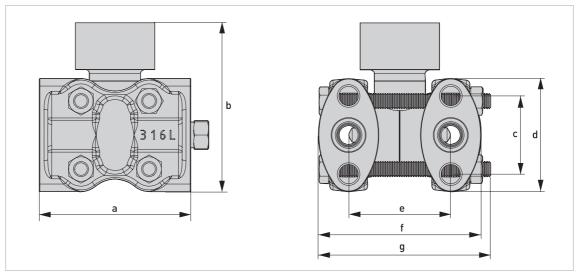


Figure 2-5: 1/4-18 NPT process connection

	Dimension [mm]	Dimension [inch]
а	80	3.15
b	88	3.46
с	41.3	1.63
d	60	2.36
е	54	2
f	86	3.39
g	91	3.58

	Weight [kg]	Weight [lb]
Process connection	2.0	4.41

Overall height of the differential pressure transmitter = b (process connection) + overall height of the respective housing

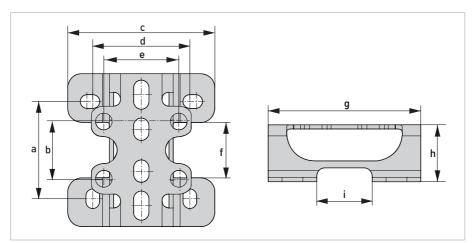


Figure 2-6: Mounting bracket

	Dimension [mm]	Dimension [inch]
а	70	2.76
b	41.3	1.63
с	106	4.17
d	70	2.76
е	54	2.13
f	40	1.57
g	110	4.33
h	41	1.61
i	40	1.57

	Weight [kg]	Weight [lb]
Mounting bracket	0.33	0.73

2 TECHNICAL DATA

2.3 Pressure ranges

Nominal range	30 mbar	100 mbar	500 mbar	3 bar	16 bar						
Limit URL (upper)	30 mbar	100 mbar	500 mbar	3 bar	16 bar						
Limit LRL (lower)	-30 mbar	-100 mbar	-500 mbar	-3 bar	-16 bar						
Smallest adjustable measuring span	1 mbar	1 mbar	5 mbar	30 mbar	160 mbar						
Turn down	30:1	100:1	100:1	100:1	100:1						
MWP (maximum system pressure) ①	40 bar	160 bar	160 bar	160 bar	160 bar						
Minimum system pressure	5 mbar abs (under reference conditions)										

① MWP corresponds to the PS designation in the PED (maximum system pressure)

Nominal range	0.44 psi	1.50 psi	7.30 psi	43.51 psi	232.1 psi							
Limit URL (upper)	0.44 psi	1.50 psi	7.30 psi	43.51 psi	232.1 psi							
Limit LRL (lower)	-0.44 psi	-1.45 psi	-7.25 psi	-43.51 psi	-232.1 psi							
Smallest adjustable measuring span	0.015 psi	0.015 psi	0.073 psi	0.44 psi	2.32 psi							
Turn down	30:1	100:1	100:1	100:1	100:1							
MWP (maximum system pressure) ①	580 psi	2321 psi	2321 psi	2321 psi	2321 psi							
Minimum system pressure	0.073 psi abs (under reference conditions)											

1 MWP corresponds to the PS designation in the PED (maximum system pressure)

2.4 Dynamic output behaviour

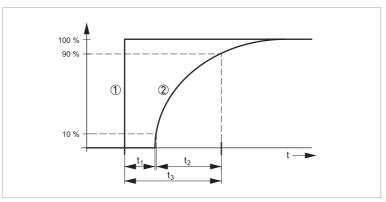


Figure 2-7: Behaviour for an sudden change of the process variable. $t_1\,$ - dead time; t_2 - rise time; t_3 - step response time

① Process variable

Output signal

These parameters depend on the filling medium, temperature and, if applicable, the chemical seal.

	Dead time (t1) [ms]	T90% (t2) [ms]	Step response time (t3) [ms] ①
30 mbar / 0.44 psi	90	115	205
100 mbar / 1.50 psi	60	95	155
500 mbar / 7.3 psi		75	135
3 bar / 43.51 psi		60	120
16 bar / 232.1 psi			

1 Step response time is the sum of dead time and T90%

3.1 Intended use

For devices used in hazardous areas, additional safety instructions apply.

Responsibility for the use of the measuring devices with regard to suitability, intended use and corrosion resistance of the used materials against the measured fluid lies solely with the operator.

The manufacturer is not liable for any damage resulting from improper use or use for other than the intended purpose.

The OPTIBAR DP 7060 C is a differential pressure transmitter suitable for measuring flow, level, differential pressure, density and interface of gases, vapours and liquids. The available measurement ranges and the respective permissible overloads are indicated on the nameplate. To observe the intended use, adhere to the following points:

- Observe the instructions in this document.
- Comply with the technical specifications (for further information refer to *Technical data* on page 8).
- Only suitably qualified personnel may install and operate the device.
- Observe the generally accepted standards of good practice.

3.2 Installation specifications

Observe the relevant directives, ordinances, standards and accident prevention regulations (e.g. VDE/VDI 3512, DIN 19210, VBG, Elex V, etc.).


The accuracy of the measurement is only guaranteed if the transmitter and accompanying impulse line(s), if any, have been correctly installed. In addition, extreme ambient conditions including large fluctuations in temperature, vibrations and shocks should be kept as far away as possible from the measuring equipment.

3.3 Venting

The ventilation for the electronics housing is assured via a filter element in the vicinity of the cable glands, which is permeable to air but water-absorbent.

In order to ensure effective ventilation, the filter element must be always free of deposits.

Do not use a high-pressure cleaner to clean the housing. The filter element may become damaged and as a result moisture can penetrate into the housing. The exception to this is the IP69K single chamber housing.

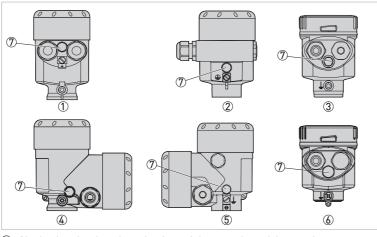

1 Single chamber housing, plastic, stainless steel precision casting

② Single chamber housing, aluminium

③ Single chamber housing, electro-polished stainless steel

④ Double chamber housing, plastic

(5) Double chamber housing, aluminium

6 Single chamber housing IP69k

⑦ Filter element

3 INSTALLATION

3.4 Measurement setup for flow measurement

3.4.1 In gases and liquids with solids content

- Include the pressure tapping points above or to the side on the process line.
- The device must be mounted above the chosen tapping point.

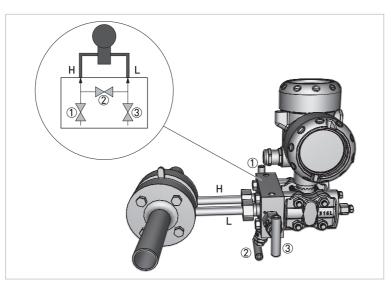


Figure 3-1: Application example

- Shut-off valve
- Equalizing valve
- ③ Shut-off valve

INSTALLATION 3

3.4.2 In vapours and pure liquids

- Include the pressure tapping points to the side on the process line.
- The device must be mounted at the same height or underneath the tapping points.
- In steam applications, fill the impulse lines and/or condensate vessels with an appropriate liquid.

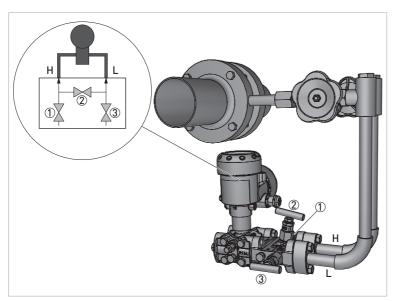



Figure 3-2: Application example

- ① Shut-off valve
- Equalizing valve
- ③ Shut-off valve

3 INSTALLATION

3.5 Measurement setup for level measurement

3.5.1 In open vessels with impulse line

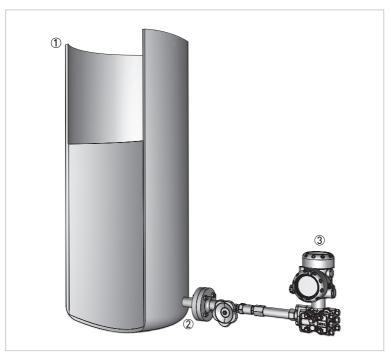



1) Tank

Impulse line

③ Differential pressure transmitter

The following points should be observed in this application:

- Mount the differential pressure transmitter below the lower process connection so that the impulse lines are always filled with liquid.
- The low pressure side (L) is open to atmospheric pressure.
- For measurements in products with solid content, the installation of separators and drain valves is recommended to enable collection and removal of debris and sediment.

3.5.2 In closed vessels with gas-filled impulse lines



Figure 3-4: Application example

- ① Tank
- ② Low-pressure line (L)
- ③ High-pressure line (H)
- ④ Differential pressure transmitter

The following points should be observed in this application:

- Mount the differential pressure transmitter below the lower process connection so that the impulse line is always filled with liquid.
- The low pressure side (L) must always be connected above the maximum level.
- For measurements of fluids with solid content, the installation of separators and drain valves is recommended to enable collection and removal of debris and sediment.

3.5.3 In closed vessels with liquid / condensate filled impulse lines



Figure 3-5: Application example

1) Tank

- Low-pressure line (L)
- ③ High-pressure line (H)
- ④ Differential pressure transmitter

The following points should be observed in this application:

- Mount the differential pressure transmitter below the lower process connection so that the impulse lines are always filled with liquid.
- The low pressure side (L) must always be connected above the maximum level.
- For measurements of fluids with solid content, the installation of separators and drain valves is recommended to enable collection and removal of debris and sediment.

4.1 Safety instructions

All work on the electrical connections may only be carried out with the power disconnected. Take note of the voltage data on the nameplate!

Observe the national regulations for electrical installations!

Observe without fail the local occupational health and safety regulations. Any work done on the electrical components of the measuring device may only be carried out by properly trained specialists.

Look at the device nameplate to ensure that the device is delivered according to your order. Check for the correct supply voltage printed on the nameplate.

4.2 Notes for electrical cables

The device must be grounded to a spot in accordance with regulations in order to protect personnel against electric shocks.

Cables may only be connected when the power is switched off! Since the transmitter has no switch-off elements, overcurrent protection devices, lightning protection and/or energy isolating devices must be provided by the customer.

4.2.1 Requirements for signal cables provided by the customer

If the signal cable was not ordered, it is to be provided by the customer. The following requirements regarding the electrical specifications of the signal cable must be observed:

Specifications for standard signal cables

- Test voltage: \geq 500 VAC RMS (750 VDC)
- Temperature range: -40...+105°C / -40...+221°F
- Capacity: ≤ 200 pF/m / 61 pF/ft
- Inductance: $\leq 0.7 \,\mu\text{H/m} / 0.2 \,\mu\text{H/ft}$
- Use cable with round cross section.
- A cable outer diameter of 5...9 mm / 0.2 ... 0.35" ensures the seal effect of the cable gland. If you are using cable with a different diameter or cross-section, exchange the seal or use a suitable cable gland.
- We generally recommend the use of a shielded cable for HART[®] multidrop mode.

4.2.2 Laying electrical cables correctly

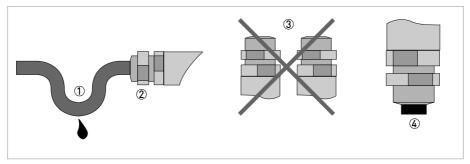


Figure 4-1: Protect housing from dust and water

- ① Lay the cable in a loop just before the housing.
- ② Tighten the screw connection of the cable entry securely.
- ③ Never mount the housing with the cable entries facing upwards.
- ④ Seal cable entries that are not needed with a plug.

4.2.3 Cable preparation

The device is connected with standard two-wire cable without shielding. If electromagnetic interference is expected which is above the test values of EN 61326-1 for industrial areas, a shielded cable should be used.

Check which outer diameter is suitable for the cable gland in order to ensure the sealing effect according to the specified IP protection class.

- 5...9 mm / 0.20...0.35" (standard)
- 6...12 mm / 0.24...0.47" (optional)
- 10...14 mm / 0.40...0.55" (optional)

The terminals in the terminal compartment are designed for wire cross-sections of up to 1.5 mm². To ensure a proper connection, you should strip the cable 40...50 mm / 1.6...2".

 


Figure 4-2: Stripping the cable ① 40...50 mm / 1.6...2" ② 5 mm / 0.2"

4.2.4 Cable entry 1/2-14 NPT (female)

With plastic housings, the NPT cable gland or the conduit steel tube must be screwed without grease into the thread. For further information about max. torque for all housings refer to Technical data on page 8.

4.2.5 Connector pin assignment

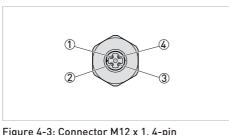


Figure 4-3: Connector M12 x 1, 4-pin

① VS+

Not connected

③ Not connected

4 VS-

Contact pin	Colour of cable	Electronic insert for terminal
Pin ①	Brown	1
Pin ④	Blue	2

4 ELECTRICAL CONNECTIONS

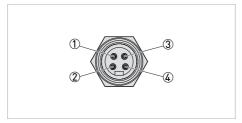


Figure 4-4: 7/8 connector, Foundation Fieldbus (FF)

- ① VS-
- () VS+
- Not connected
- 4 Cable shield

Contact pin	Colour of cable	Electronic insert for terminal
Pin ①	Blue	1
Pin ②	Brown	2
Pin ④	Green / yellow	Grounding

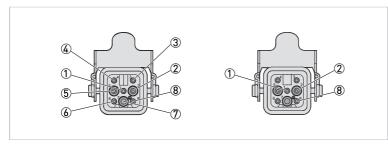


Figure 4-5: Connector, Harting HAN 8D (left) and Harting HAN 7D (right)

② VS+

Contact pin	Colour of cable	Electronic insert for terminal
Pin ①	Black	1
Pin (2)	Blue	2
Pin (8)	Green / yellow	Grounding

4.2.6 Connection to the power supply

 


Figure 4-6: Connection to the power supply

① Red

Black

③ Power supply with load

4.2.7 Cable shield and grounding

If a shielded cable is necessary, connect the cable shield on both ends to the grounding potential.

In the device, the cable shield must be connected directly to the internal ground terminal.

The ground terminal outside on the housing must be connected to the grounding potential with low impedance.

In hazardous areas, the grounding is carried out according to the installation instructions.

Significant potential differences exist inside galvanization plants as well as on vessels with cathodic corrosion protection. A two-sided shield grounding can cause unacceptably high shield currents as a result.

The metallic and wetted parts (process connection, cap flange, measuring cell and separating diaphragm etc.) are conductive connected with the inner and outer ground terminal on the housing.

4.3 Electrical connection

The connection of the power supply and the signal output is carried out via spring-loaded terminals in the housing. The display and adjustment module is connected via contact pins with the interface adapter.

4.3.1 Connection in the terminal compartment

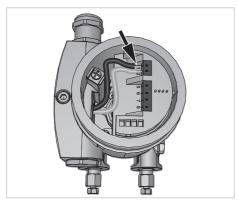


Figure 4-7: Terminal compartment from above

Procedure


- Unscrew the housing cover.
- If present, remove the display and adjustment module by turning it to the left.
- Loosen union nut of the cable gland.
- For preparation of connection cable refer to *Cable preparation* on page 30.
- Push the cable through the cable gland into the terminal compartment.
- Insert the wire ends into the open terminals according to the wiring plan. Flexible cores with cable end sleeves as well as solid cores can be inserted directly into the terminal openings. In case of flexible cores, press the spring terminal with a small screwdriver to open the terminal opening.
- Check the proper hold of the wires in the terminals by lightly pulling on them.
- Connect the cable shield to the internal ground terminal, connect the outer ground terminal to the customer/plant equipotential bonding.
- Tighten the union nut of the cable gland. The sealing ring must completely enclose the cable.
- Screw the housing cover back on.

4.3.2 Single chamber housing

For devices used in hazardous areas, additional safety notes apply; please refer to the Ex documentation.

The following illustration applies to both the non-Ex as well as the Ex ia, the Ex d and the Ex d ia version.

Electronics compartment

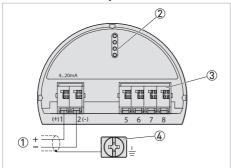

① Power supply / signal output


- ② Interface adapter for the display and adjustment module
- Digital interface
- ④ Ground terminal for connection of the cable shield

4.3.3 Double chamber housing

For devices used in hazardous areas, additional safety notes apply; please refer to the Ex documentation.

The following illustration applies to both the non-Ex as well as the the Ex ia, and the Ex d version.


Electronics compartment

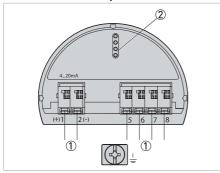

① Internal connection to terminal compartment

2 Interface adapter for the display and adjustment module

Terminal compartment

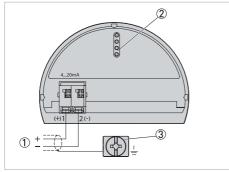


- ① Power supply / signal output
- 2 Interface adapter for the display and adjustment module
- ③ Ground terminal for connection of the cable shield

4.3.4 Double chamber housing Ex d ia


For devices used in hazardous areas, additional safety notes apply; please refer to the Ex documentation.

Electronics compartment

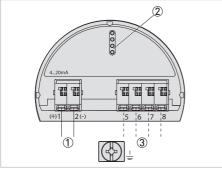

- 1 Power supply / signal output
- ② Interface adapter for the display and adjustment module
- Digital interface

Terminal compartment

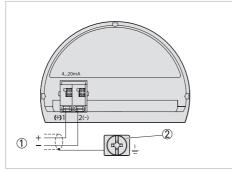

- ① Power supply / signal output
- O O Ground terminal for connection of the cable shield

5.1 Order code

The characters of the order code highlighted in light grey describe the standard.

VGK7	4	Аррі	roval														
		AX	Ex-f	ree zo	ne	Europe	WX	Ex-free zone International									
		AC	ATE	X II 1G	, 1/	2G, 2G Ex ia IIC T6	WC	IEC Ex ia IIC T6									
		AD	ATE	X II 1/:	2G,	2G Ex d ia IIC T6	WD	IEC Ex d ia IIC T6									
		AE	ATE	X II 1/:	2G,	2G Ex d IIC T6	WE	IEC Ex d IIC T6									
		AR	ATE	X II 1D	, 1/	2D,1/3D,2D IP66	WR	IEC Ex t IIIC T IP66									
		AH	ATE2 1/20	X II 1G), 1/3E	, 1/:), 2[2G 2G Ex ia IIC + II 1D,) IP66	WH	IEC Ex ia IIC T6 + IEC Ex t IIIC T IP66									
		AT				2G, 2G Ex ia IIC + C IP67/66	W1	IEC Ex d ia IIC T6 + IEC Ex t IIIC T IP66									
		A1	ATE2 1/20	X II 1/2), 1/3E	2G,), 2[2G Ex d ia IIC + II 1D, D IP66	WL	IEC Ex d IIC T6 + IEC Ex t IIIC T IP66									
		AL															
		AS	ATE	X II 1/:	2/-0) Ex t IIIC IP67/66 T D	-										
			Material / Process connection / Venting														
			S0														
			SR	316	L; 1	/4-18 NPT; UNF7/16; c	on pro	cess axis									
			SD 316 L; 1/4-18 NPT; UNF7/16; at side														
			A0	316	L; A	.dpt. 1/2-14 NPT; UNF	7/16; v	vithout									
			AR	316	L; A	.dpt. 1/2-14 NPT; UNF	7/16; c	on process axis									
			AD	316	L; A	.dpt. 1/2-14 NPT; UNF	7/16; a	at side									
			DY	Prep	are	d for diaphragm seals											
				· · ·		gm / Filling oil											
				S 1	.440	14 (AISI 316 L), silicone	oil										
				G	ask	et											
				E	EF	PDM											
				F	Fł	٢M											
				N	N	BR											
				P	P1	FE											
						easuring range / PN											
					2	30 mbar / 0.43 psi; 40	bar/	580 psi									
					3	100 mbar / 1.45 psi; 1	60 bar	- / 2400 psi									
					4	500 mbar / 7.25 psi; 1	60 bar	- / 2400 psi									
					5	3 bar / 43.5 psi; 160 b	ar/24	00 psi									
					6	16 bar / 232 psi; 160 b	ar / 2	400 psi									

OPTIBAR DP 7060

۵di	ustment (customer specific measuring range)
-	Nominal range %
	Nominal range mbar
	Nominal range bar
	Nominal range psi
	Nominal range Pa
	Nominal range kPa
	Nominal range Mpa
	Nominal range mmH20
	Nominal range inH20
	Nominal range mmHG
	Nominal range inHG
	Nominal range mm (density 1)
	Nominal range cm (density 1)
	Nominal range m (density 1)
	Nominal range in (density 1)
	Nominal range ft (density 1)
	Customer specific adjustment for level measurement
	Customer specific adjustment for flow measurement
	Customer specific adjustment for pressure measurement
	Accuracy class
١	M 0.065%
	Electronics
	H 2-wire 420 mA / HART [®]
	A 2-wire 420 mA / HART [®] with SIL (in preparation)
	F Foundation Fieldbus
	P Profibus PA
	Supplementary electronics
	X without
	Housing
	K Plastic (PBT), DIN single chamber
	R Plastic (PBT), DIN double chamber
	A Aluminium, DIN single chamber
	D Aluminium, DIN double chamber
	8 316 L (electro-polished), DIN single chamber
	V 316 L, DIN single chamber
	W 316 L, DIN double chamber
	Housing version / Ingress protection
	1 compact, IP 66 / 67, NEMA 6P
	1 compact, IP 66 / 67, NEMA 6P

5 ORDER INFORMATION

-		al connection / Material
		x 1.5, plastic, black, 59 mm / 0.200.35"
S		x 1.5, plastic, black, 612 mm / 0.240.47"
Т	M20 0.39.	x 1.5, plastic, black, 1014 mm / 0.55"
K	M20	x 1.5, plastic, blue, 59 mm / 0.200.35"
U	M20	x 1.5, plastic, blue, 612mm / 0.240.47"
V	M20	x 1.5, plastic, blue, 1014mm / 0.390.55"
0	M20 0.16.	x 1.5, nickel-plated brass, 48.5 mm / 0.33"
L	M20	x 1.5, 316 L, 612 mm / 0.240.47"
D	M20	x 1.5, blind plug
F	M20	x 1.5, connector HAN7D, straight
G	M20	x 1.5, connector HAN7D, 90°
Н	M20	x 1.5, connector HAN8D, straight
W	M20	x 1.5, connector HAN8D, 90°
		4 NPT, blind plug
7		4 NPT, plastic, black, 59 mm / 0.20.35"
Ρ	1/2-1	4 NPT, nickel-plated brass, 48.5 mm / 0.33"
Z	1/2-1	4 NPT, connector 7/8-14 NPT
		ay / Adjustment module
	X	without
	А	mounted (top)
	В	mounted (side)
	F	without, lid with sight window
		Language – Display
		D DE - German
		E EN - English
		1 JP - Japanese
		C CN - Chinese
		F FR - French
		N NL - Dutch
		S ES - Spanish
		T IT - Italian
		Language – Manual
		D DE - German
		E EN - English
		F FR - French
		Additional process barrier
		0 without
		S with secondary process barrier

										ld	Identification tag								
										0	with	out							
										F	Foil	(40 x 20 mm)							
										S	Stai	nless steel (40 x 20 mm)							
											Dev	ice settings							
											0 v	vithout							
											C	Certificates							
											Х	without							
											N	1 Observe VZPA / B code							
VGK7	4																		

								_	 				 		
<u> </u>									 						
	 							_	 		 	 	 		
						 		-							
<u> </u>		 				 		_	 						
<u> </u>															
<u> </u>															
<u> </u>								_							
<u> </u>													 		

		1	1												
	 		 			 		 	 	 	 	_	 		
<u> </u>															
<u> </u>															
<u> </u>		 													
		 		-		 							 		
-		 				 									
L															

NOTES 6



KROHNE product overview

- Electromagnetic flowmeters
- Variable area flowmeters
- Ultrasonic flowmeters
- Mass flowmeters
- Vortex flowmeters
- Flow controllers
- Level meters
- Temperature assemblies
- Pressure transmitters
- Analysis products
- Products and systems for the oil & gas industry
- Measuring systems for the marine industry

Head Office KROHNE Messtechnik GmbH Ludwig-Krohne-Str. 5 47058 Duisburg (Germany) Tel.:+49 203 301 0 Fax:+49 203 301 103 89 info@krohne.com

The current list of all KROHNE contacts and addresses can be found at: www.krohne.com

