

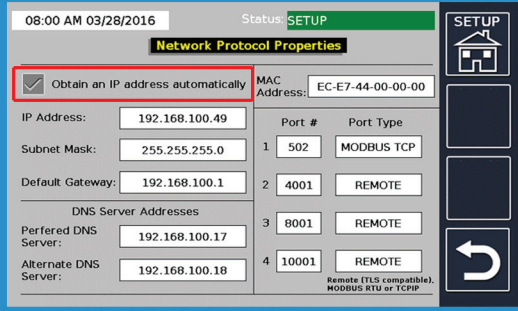


System Status Menu > Utilities > Time & Date

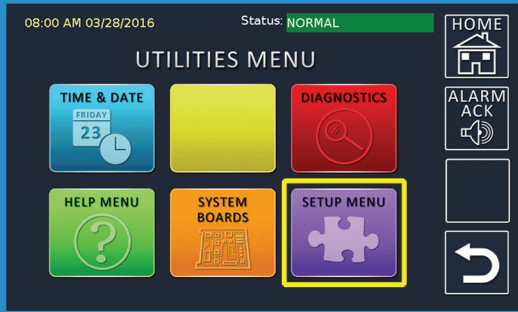


- Thermal paper roll dimensions:
- Diameter: 1.4 inches
 - Width: 2.25 inches
 - Plastic core (inside) diameter: 0.5 inches

NOTE: The thermal printer will only accept thermal paper; it will only print on one side. Confirm that the paper roll is installed as shown above (image 2) to ensure that the device prints correctly. A thermal paper roll installed incorrectly will result in blank printouts. The green power light (upper right on the printer) is also the paper feed button.

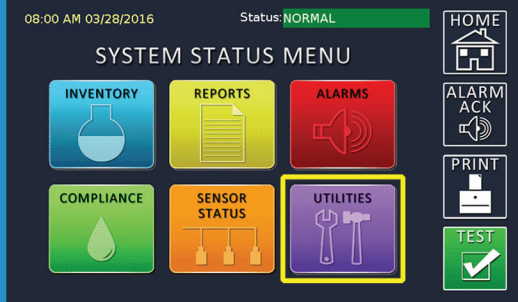

Input your valid network details here including a static IP (recommended) for this specific Proteus ATG or determine the IP if depending on DHCP (dynamic).

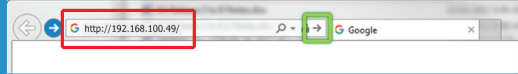

In your web browser's **URL address field** (e.g., Internet Explorer, Chrome, Firefox, etc.), type in your controller's IP address (address above is simply an example). Press ENTER or the **GO TO arrow (->)** to the right of the URL field. The OMNTEC Proteus web page will open.

System Status Menu > Utilities > Setup Menu

Document No. DI00014 DI00015 DI00018 DI00020 DI00026 rev2028

To access the web page, the Proteus ATG must be connected to a network and programmed for the network using a static IP address (recommended) or DNS address within NETWORK PROPERTIES.

To navigate to NETWORK PROPERTIES in SETUP: from the HOME SCREEN, the SETUP MENU is located within UTILITIES. Touch the UTILITIES icon.

From the UTILITIES MENU, touch the SETUP MENU icon: Enter the SETUP MENU > PASSWORD (default is 000000) > NETWORK PROPERTIES.

Network Protocol Properties: Used to setup either a static or dynamic IP address by toggling the checkbox "Obtain an IP address automatically."

Proteus (OEL8000III) Quick Reference Guide



OMNTEC
Advanced Tank Monitoring & Leak Detection

For more details, please refer to our Proteus programming manual, DP00014 DP00015 DP00018 DP00020 DP00026, and our Proteus installation manuals, DI00018 DI00026 (Proteus B), DI00014 DI00015 (Proteus K), DI00020 (Proteus X).

V
I
E
W
R
E
P
O
R
T
S

08:00 AM 03/28/2016 Status: NORMAL

SYSTEM STATUS MENU

INVENTORY REPORTS ALARMS

COMPLIANCE SENSOR STATUS UTILITIES

HOME ALARM ACK PRINT TEST

08:00 AM 03/28/2016 Status: NORMAL

REPORTS MENU

ALARM LOG DELIVERY LOG SHIFT LOG

VLD LOG SYSTEM TEST CITLD LOG

HOME

System Status Menu > Reports Icon > choose desired log icon

P
R
I
N
T
R
E
P
O
R
T
L
O
G
S

08:00 AM 03/28/2016 Status: NORMAL

SYSTEM STATUS MENU

INVENTORY REPORTS ALARMS

COMPLIANCE SENSOR STATUS UTILITIES

HOME ALARM ACK PRINT TEST

SEND TO PRINTER

PRESS A BUTTON TO PRINT

INVENTORY ALARM LOG

SYSTEM TEST DELIVERY LOG

CURRENT ALARMS SHIFT LOG

INTERSTITIAL REPORT VLD LOG

COMPLIANCE SETUP CITLD LOG

ADVANCED PRINTING FEATURES

LOGS TANK/SENSOR #

NUMBER OF LOGS

LOGS BY DATE

CANCEL PRINTING

System Status Menu > Print Icon (right margin)

C
H
E
C
K
I
N
V
E
N
T
O
R
Y

08:00 AM 03/28/2016 Status: NORMAL

SYSTEM STATUS MENU

INVENTORY REPORTS ALARMS

COMPLIANCE SENSOR STATUS UTILITIES

HOME ALARM ACK PRINT TEST

08:00 AM 03/28/2016 Status: NORMAL

INVENTORY

TANK: 1 Diesel Fuel 6,790 G Gross Vol 67.90% Normal	TANK: 2 Regular 89 5,495 G Gross Vol 68.69% Normal
TANK: 3 Plus 91 6,869 G Gross Vol 68.69% Normal	TANK: 4 Supreme 93 6,869 G Gross Vol 68.69% Normal

HOME MENU

System Status Menu > Inventory Icon

H
E
L
P
M
E
N
U

08:00 AM 03/28/2016 Status: NORMAL

SYSTEM STATUS MENU

INVENTORY REPORTS ALARMS

COMPLIANCE SENSOR STATUS UTILITIES

HOME ALARM ACK PRINT TEST

08:00 AM 03/28/2016 Status: NORMAL

UTILITIES MENU

TIME & DATE DIAGNOSTICS

HELP MENU SYSTEM BOARDS SETUP MENU

HOME ALARM ACK

System Status Menu > Utilities > Help Menu

F
I
R
M
W
A
R
E
&
S
E
R
I
A
L

08:00 AM 3/28/2017 Status: NORMAL

HELP MENU

Omntec Mfg. Inc. Phone: 631-981-2001
1993 Pond Rd Fax: 631-981-2007
Ronkonkoma NY, 11779

PROBE INFO PROBE/SEN WIRING REMOTE SETTINGS SYSTEM 'Status' SYS-BUS ALARMS

SENSOR INFO ALARM INFO VERSION NUMBERS TESTING IN DEMO MODE

PROTEUS SERIES TANK MONITORING SYSTEM

Part Num: Proteus K4 CITLD Enabled: YES Display Mode: INT.
Serial#: EL123456 MODBUS Enabled: NO SD Card: YES

REMOTE DISPLAY (Option)

8:00 AM 03/28/2016 Status: NORMAL

BOARD - FIRMWARE AND SERIAL NUMBERS

GUI Ver: BKX P2R 2015-10-02
Display Ver: K4: P002:R:0 2015-10-02 GUI SN 00001

MCU Ver: P2AG SN: 00001
DISPLAY Ver: P2R SN: 00001
XB-416 Ver: P2AL SN: 00001

HOME ALARM ACK

From Help Menu > Version Numbers (Serial # lower left)

A
L
A
R
M
I
N
F
O

08:00 AM 3/28/2017 Status: NORMAL

HELP MENU

Omntec Mfg. Inc. Phone: 631-981-2001
1993 Pond Rd Fax: 631-981-2007
Ronkonkoma NY, 11779

PROBE INFO PROBE/SEN WIRING REMOTE SETTINGS SYSTEM 'Status' SYS-BUS ALARMS

SENSOR INFO ALARM INFO VERSION NUMBERS TESTING IN DEMO MODE

PROTEUS SERIES TANK MONITORING SYSTEM

Part Num: Proteus K4 CITLD Enabled: YES Display Mode: INT.
Serial#: EL123456 MODBUS Enabled: NO SD Card: YES

REMOTE DISPLAY (Option)

In-Tank Warning And Alarm Levels

- Max Height Alarm: Audible Alarm, LED Light
- High Level Alarm: Audible Alarm, LED Light
- Overfill Alarm (Optional) (Only active during a delivery): Audible Alarm, LED Light
- Delivery Needed (Optional): Audible Alarm, LED Light
- Low Level Alarm: Audible Alarm, LED Light
- High Water Alarm: Audible Alarm, LED Light
- Annular (Interstitial) Area Product / Water / Liquid Alarm: Audible Alarm, LED Light

From Help Menu > Alarm Info (includes Trigger Points)