

External Chamber Sealed or Flanged Top

DESCRIPTION

Magnetrol's external chamber is a self-contained cage designed for use with our top mounting level transmitters or switches. Quality construction and a wide selection of configurations make this cage an ideal means of utilizing the power of our many technologies without mounting directly into the process vessel. The chamber is suitable for use with Eclipse[®] Guided Wave Radar and Kotron[®] RF Capacitance transmitters, all electronic point sensors and top mounted displacer switches.

FEATURES

- Sealed or flanged-top chamber options
- 2" and 3" nominal chamber diameters to accommodate all sensing elements
- Carbon steel or 316 stainless steel materials of construction
- Rugged Magnetrol commercial construction available as well as ASME B31.3, ASME B31.1, NACE or combined NACE and ASME B31.3 construction options
- Rated for pressures up to 5000 psi (345 bar)
- For applications to +750° F (+400° C)
- Lengths for measuring ranges to twenty feet (6.1 m)
- Broad selection of process connections sizes and types
- Head flange bolting included with flange-top models
- Optimal design for use with Eclipse Guided Wave Radar transmitter:
 - Smallest possible chamber diameters
 - Pressure rating to match High Temperature, High Pressure (HTHP) and High Pressure (HP) probes
 - Temperature rating to match HTHP probe
 - Space above and below measuring range to accommodate measurement transition zones
- Suitable for use with RF capacitance transmitters, all electronic point sensors and top mounted displacer switches



APPLICATIONS

- Replace existing caged torque-tube controls
- New construction as well as retrofits
- Boiler feed-water heaters
- High pressure process vessels
- Turbulent vessel conditions
- Isolation of instrument desirable
- Elevated temperature process conditions
- Hydrocarbon and chemical process tanks

COMMERCIAL DESIGN

- ASTM materials per model number
- Slip-on head and process flanges (A) (unless weld neck connections are specified in model number)
- Branch connections are pipe to pipe (B) for ≤ 600# construction and Bonney type fittings (C) for ≥ 900# construction

ASME B31.1 DESIGN CODE

- ASME grade materials procured with Certificate of Conformance
- Slip-on head and process flanges (A) for ≤ 300# construction (unless weld neck connections are specified in model number), weld neck head (D) and process flanges (F) for ≥ 600# construction
- Branch connections are Bonney type fittings (C)
- Welding done by ASME qualified welders per ASME Section IX procedures

- Welding per ASME Section IX procedures
- Hydrostatic test at $1.5 \times$ rated pressure
- Flanged or sealed cages
- Full penetration chamber branch welds (G)
- Full penetration circumferential welds (H) for ≥ 600# construction
- 100% visual inspection of circumferential welds for full penetration for ≥ 600# construction
- Certified ten minute hydrostatic test at 1.5 × rated pressure
- Flanged or sealed cages
- Stress limits per code

ASME B31.3 DESIGN CODE

- ASME grade materials procured with Certificate of Conformance
- Slip-on head and process flanges (A) for ≤ 900# construction and 2" 1500# cages (unless weld neck connections are specified in model number)
- Weld neck head flange (D), slip-on process flanges for (A) 3" 1500# cages (unless weld neck connections are specified in model number)
- Weld neck head (D) and process flanges (F) for 5000 psi construction
- Branch connections are Bonney type fittings (C)
- Welding done by ASME qualified welders per ASME Section IX procedures

NACE DESIGN CODE

- ASME grade and NACE listed materials procured with Certificate of Conformance
- Slip-on head and process flanges (A) (unless weld neck connections are specified in model number)
- Branch connections are pipe to pipe (B) for ≤ 600# construction and Bonney type fittings (C) for ≥ 900# construction
- Welding done by ASME qualified welders per ASME Section IX procedures

- Full penetration chamber branch welds (G)
- Full penetration circumferential welds (H) for 5000 psi construction and 3" 1500# cages
- 100% visual inspection of circumferential welds for full penetration for ≥ 600# construction
- Certified ten minute hydrostatic test at $1.5 \times$ rated pressure
- Five percent radiographic examination of full penetration circumferential welds
- Flanged or Sealed cages
- Stress limits per code
- Hydrostatic test at $1.5 \times$ rated pressure
- Carbon steel cage assembly is post weld heat treated
- Welds and adjacent heat affected zones are hardness tested
- 316 stainless steel pressure boundary parts are annealed, if required, to achieve required hardness
- Flanged or sealed cages


DESIGN CONSTRUCTION COMPARISON

	Comm	B31.3	B31.1	NACE
ASME grade and NACE listed materials		•	•	•
Certificate of Conformance on materials		٠	•	٠
Slip-on head and process flanges ^①	•	≤1500# ^②	≤300#	•
Weld neck head and slip-on process flanges $^{}$		3" 1500#		
Weld neck head and process flanges		5000 psi	≥600#	
Pipe to pipe branch connections	≤600#			≤600#
Bonney type fittings	≥900#	•	•	≥900#
ASME Section IX welding procedures	•			
Welding by ASME qualified welders per ASME Section IX procedures		•	•	•
Full penetration chamber branch welds		•	•	
Full penetration circumferential welds		≥1500# ³	≥600#	
100% visual inspection of circumferential welds for full penetration		≥1500# ³	≥600#	
Hydrostatic test at $1.5 \times$ rated pressure	•			•
Certified ten minute hydrostatic test at $1.5 \times$ rated pressure		•	•	
Five percent radiographic examination of full penetration circumferential welds		•		
Post weld heat treatment				CS
Annealing, if required for hardness				SS
Hardness testing of welds and adjacent heat affected zones				•
Flanged or sealed chambers	•	•	•	•
Stress limits per design code		•	•	

Unless weld neck process flanges are specified in model number

2 Except 3" 1500# cage

3 Except 2" 1500# cage

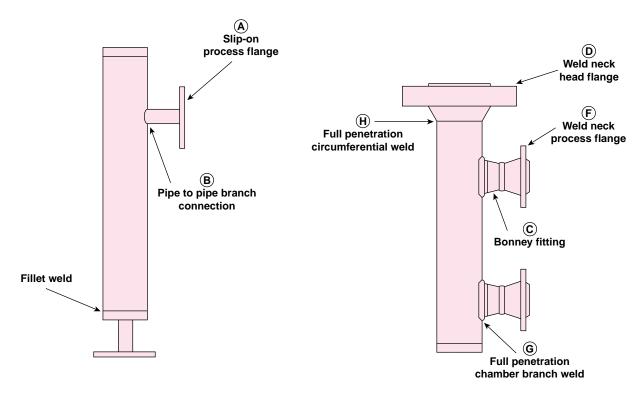

Sealed Chamber

Flanged Chamber

DIMENSIONAL INFORMATION

HEAD FLANGE TYPE

Design Standard	Ohamhar Dating		Process	Connection Ty	pe (seventh digit)	
Design Standard (third digit)	Chamber Rating (fifth digit)	NPT	Socket Weld	Slip-on RF	Weldneck RF	Weldneck RTJ
		(A, G)	(B, H)	(D, K)	(E, L)	(F, M)
	150# (A)					
	300# (B)					
Commercial	600# (C)					
(1, 5)	900# (D)					
	1500# (E)		Slip-on raised face	2		
	5000 psi (F)			5		
	150# (A)					
	300# (B)					
ASME B31.3	600# (C)				Weldneck	raised face
(4, 7)	900# (D)					
	1500# (E)	Woldnor	ck raised face	*		
	5000 psi (F)	veidried	ch raiseu lace	n/a		
	150# (A)		Slip-on raised fac			
	300# (B)		Slip-on raised lac	,e		
ASME B31.1	600# (C)					
(3)	900# (D)	Woldnor	ck raised face	n/a		
	1500# (E)	vveidned	r iaiseu iace	II/a		
	5000 psi (F)					


* 1500# ASME B31.3 will have a slip-on head flange on 2" cage and weld neck head flange on 3" cage

PROBE LENGTH

If utilizing a sealed top chamber, go to page 5 for 'A' dimension.

To properly size your sensing element when mounting in a flange top chamber, it is necessary to determine the dimension from the face of the head flange to the centerline of the upper process connection. To determine this dimension:

- 1. Use the third, fifth & seventh digits of your chamber model number and the above chart to verify the type of head flange on your chamber.
- 2. On page 5, locate the 'A' dimension of your chamber according to the chamber pressure rating, head flange type, design standard, chamber size & process connection size.
- 3. Go to the formulas on page 6 for probe or cable lengths. Using your 'A' dimension and measuring range (customer designated), determine your required probe length.

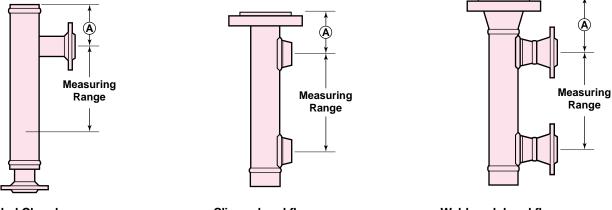

Sealed Chamber

Slip-on head flange

Weld neck head flange

See bulletin 41-640 for additional dimensional information.

DIMENSIONAL INFORMATION

SEALED CHAMBER ("A" DIMENSION)

Commercial – all pressures, chamber sizes, & connection sizes = 7.00" (178 mm)

ASME 31.3 – all pressure, chamber sizes, & process connection sizes = 7.68" (195 mm) Slip-on process flanges not available on 5000 psi construction

ASME 31.1 – all pressure, chamber sizes, & process connection sizes = 7.68" (195 mm) Slip-on process flanges not available on 600#, 900#, 1500#, and 5000 psi construction

FLANGED CHAMBER ("A" DIMENSION)

Chamber					2" Cł	namber			3" Cha	mber		
Pressure	Head Flange	Design		Proc	ess Col	nnection §	Size	Pr	ocess Cor	nnection	Size	
Rating	Туре	Standard	34"		1"	1½"	2"	3⁄4"	1"	1½"	2"	
		Commercial										
	slip-on	ASME 31.3	6.00" (152 mm)									
150#		ASME 31.1										
130#		Commercial					7.50"					
	weldneck	ASME 31.3		6.00'	' (152 m	ım)	7.50"					
		ASME 31.1					(191 mm)	6.00" (152 mm)				
		Commercial										
	slip-on	ASME 31.3			6.00" (152 mm)		0.00 (132 1111)				
300#		ASME 31.1										
300#		Commercial										
	weldneck	ASME 31.3		6.00'	' (152 m	ım)	7.50" (191 mm)					
		ASME 31.1					(191 mm)					
		Commercial				150	-					
	slip-on	ASME 31.3			6.00 (152 mm)						
C00#		ASME 31.1			r	n/a		n/a				
600#		Commercial						6.00" (152 mm) ①				
	weldneck	ASME 31.3	6.00" (152 mm))" (152 mm)		7.50"	0.001 (150 mm			7.00"	
		ASME 31.1 @			(191 mm)	0.	00" (152 mm)		(178 mm			
		Commercial				150	-					
	slip-on	ASME 31.3			6.00" (152 mm)		6.00" (152 mm)				
000#		ASME 31.1			r	n/a			r	n/a		
900#		Commercial							6.00" (1	52 mm) ①		
	weldneck	ASME 31.3		6.00'	' (152 m	ım)	6.50"	0	001 (150 m			
		ASME 31.1 @					(165 mm)	0.	.00" (152 m	1(11)	7" (178 mr	
		Commercial							6.50" (1	65 mm)		
	slip-on	ASME 31.3			0.50 (165 mm)	-	· · · ·				
1500#		ASME 31.1			r	n/a		n/a				
1500#		Commercial						6.50" (165 mm) @				
	weldneck	ASME 31.3	6.50" (165 mm) 8.50" (216 mm)			6	.50"	7	.50"			
		ASME 31.1 @				(165	ō mm)	(191	mm)			
		Commercial				8.50" (216 mm)						
	slip-on	ASME 31.3	- n/a			n/a						
5000		ASME 31.1										
5000 psi		Commercial							8.50" (21	16 mm)③		
	weldneck	ASME 31.3 @		8.50'	' (216 m	ım)	9.50"	8	.50"		.50"	
		ASME 31.1 45			-		(241 mm)	(21)	6 mm)	(24	1 mm)	

① Except with 2" weldneck process flanges = 7.00" (178 mm)

2 Except with 1-1½" and 2" weldneck process flanges = 7.50" (191 mm)

3 Except with 1-1½" and 2" weldneck process flanges = 9.50" (241 mm)

④ No slip-on process flanges

⑤ Stainless steel materials of construction only. Carbon steel is not available.

PHYSICAL SPECIFICATIONS

Measuring span length	From 12 to 240 inches (30-610 cm)
Eclipse probe length 10	
sealed cage	Measuring range 2 + A + 5 inches (13 cm) (rounded down to nearest inch)
flanged cage	Measuring range 2 + A + 6 inches (15 cm) (rounded down to nearest inch)
Kotron probe length 3	
sealed cage	Measuring range 2 + A + 3 inches (7 cm) (rounded down to nearest inch)
flanged cage	Measuring range 2 + A + 4 inches (10 cm) (rounded down to nearest inch)
Displacer cable length (min.) @5	Measuring range 2 + A + 6 inches (15 cm) (rounded up to nearest foot)
Materials of Construction	Carbon steel or 316 stainless steel
	(head flange bolting ASTM A193 GrB7 regardless of chamber material)
Sensor Connections	$^{3}\!$
Process Connection Sizes	¾", 1", 1½" or 2"
Process Connection Ratings	150#, 300#, 600#, 900#, 1500# or 2500# ANSI $\textcircled{\sc s}$
Process Connection Types	threaded, socketweld, slip-on RF flanges,
	weldneck RF flanges, weldneck RTJ flanges
Connection Configurations	Side-side, side-bottom
Process Pressures	Up to 5000 psi (345 bar)
Process Temperatures	Up to +750° F (+399° C)

① See bulletin 57-101 for Eclipse transmitter and probe part numbers.

^② Measuring range is last three digits of chamber model number.

③ See bulletin 50-125 for Kotron probe part numbers.

④ See bulletin 45-115 for top mounted displacer switch part numbers and allowable high level dimension with respect to face of mounting flange.

5 Must be used in 3" flanged cage.

6 Maximum pressure rating of cage with 2500# flanges is 5000 psi @ 100° F (345 bar @ 38° C).

MODEL NUMBER

MOUNTING

S	Sealed external chamber (NPT sensor connection)
F	Flanged top external chamber
	NOMINAL CHAMBER DIAMETER

2	2 incl	n 🕐 If sealed chamber, ¾" NPT sensor connection If flanged chamber, flanged sensor connection same size as chamber
3	3 incl	n If sealed chamber, 2" NPT sensor connection If flanged chamber, flanged sensor connection same size as chambe
	⑦ Di	splacer switches require 3" cage.
	DESIG	N STANDARD
	1	Commercial Construction
	3	ASME B31.1 Certified ®®
	4	ASME B31.3 Certified ®
	5	Commercial Construction and NACE certified ®
	7	ASME B31.3 Certified and NACE certified ®
		8 Level switch/transmitter must also be specified to required code, if applicable.
¥	¥	
Γ		
1		

MATERIALS OF CONSTRUCTION ®

	on Steel, measuring range in inches [®] 116L Stainless Steel, measuring range in inches	
	ocess connection materials will match chamber materials	
CHAM	IBER RATING ®	
А	150# ANSI class	
В	300# ANSI class	
С	600# ANSI class	
D	900# ANSI class	
Е	1500# ANSI class	
F	5000 psi (process flanges will be 2500# ANSI)	
	 Process flange, if applicable, will match chamber rating, except as indicated 	
	PROCESS CONNECTION SIZE	
	1 ¾"	
	2 1"	
	3 1½"	
	4 2"	
	PROCESS CONNECTION TYPE AND CONFIGURATION ® Side/Side Configurations	Head Flange Typ
	PROCESS CONNECTION TYPE AND CONFIGURATION ® Side/Side Configurations A NPT	Head Flange Typ
	Side/Side Configurations	
	Side/Side Configurations A NPT B SW	
	Side/Side Configurations A NPT B SW D Slip-on RF Flange @	Slip-on or weld ne
	Side/Side Configurations A NPT B SW D Slip-on RF Flange ® E Weldneck RF Flange Chamber rating codes A, B & C only	
	Side/Side Configurations A NPT B SW D Slip-on RF Flange ® E Weldneck RF Flange Chamber rating codes A, B & C only	Slip-on or weld ne
	Side/Side Configurations A NPT B SW D Slip-on RF Flange @ E Weldneck RF Flange Chamber rating codes A, B & C only F Weldneck RJ Flange Chamber rating codes C, D, E & F only Side/Bottom Configurations	Slip-on or weld ne
	Side/Side Configurations A NPT B SW D Slip-on RF Flange ® E Weldneck RF Flange Chamber rating codes A, B & C only F Weldneck RJ Flange Chamber rating codes C, D, E & F only	Slip-on or weld ne
	Side/Side Configurations A NPT B SW D Slip-on RF Flange ® E Weldneck RF Flange Chamber rating codes A, B & C only F Weldneck RJ Flange Chamber rating codes C, D, E & F only Side/Bottom Configurations G NPT H SW	Slip-on or weld ne
	Side/Side Configurations A NPT B SW D Slip-on RF Flange ® E Weldneck RF Flange Chamber rating codes A, B & C only F Weldneck RJ Flange Chamber rating codes C, D, E & F only Side/Bottom Configurations G NPT H SW K Slip-on RF Flange ®	Slip-on or weld ne
	Side/Side Configurations A NPT B SW D Slip-on RF Flange @ E Weldneck RF Flange Chamber rating codes A, B & C only F Weldneck RJ Flange Chamber rating codes C, D, E & F only Side/Bottom Configurations G NPT H SW K Slip-on RF Flange @ L Weldneck RF Flange Chamber rating codes A, B & C only	Head Flange Typ Slip-on or weld ne Weld neck
	Side/Side Configurations A NPT B SW D Slip-on RF Flange ® E Weldneck RF Flange Chamber rating codes A, B & C only F Weldneck RJ Flange Chamber rating codes C, D, E & F only Side/Bottom Configurations G NPT H SW K Slip-on RF Flange @ L Weldneck RJ Flange Chamber rating codes A, B & C only M Weldneck RJ Flange Chamber rating codes C, D, E & F only	Slip-on or weld ne
	Side/Side Configurations A NPT B SW D Slip-on RF Flange ® E Weldneck RF Flange Chamber rating codes A, B & C only F Weldneck RJ Flange Chamber rating codes C, D, E & F only Side/Bottom Configurations G NPT H SW K Slip-on RF Flange @ L Weldneck RJ Flange Chamber rating codes A, B & C only M Weldneck RJ Flange Chamber rating codes C, D, E & F only @ Process connection materials will match chamber materials	Slip-on or weld ne Weld neck Slip-on or weld ne
	Side/Side Configurations A NPT B SW D Slip-on RF Flange ® E Weldneck RF Flange Chamber rating codes A, B & C only F Weldneck RJ Flange Chamber rating codes C, D, E & F only Side/Bottom Configurations G NPT H SW K Slip-on RF Flange @ L Weldneck RJ Flange Chamber rating codes A, B & C only M Weldneck RJ Flange Chamber rating codes C, D, E & F only	Slip-on or weld ne Weld neck Slip-on or weld ne
	Side/Side Configurations A NPT B SW D Slip-on RF Flange @ E Weldneck RF Flange Chamber rating codes A, B & C only F Weldneck RJ Flange Chamber rating codes C, D, E & F only Side/Bottom Configurations G NPT H SW K Slip-on RF Flange @ L Weldneck RJ Flange Chamber rating codes A, B & C only M Weldneck RJ Flange Chamber rating codes C, D, E & F only @ Process connection materials will match chamber materials @ See page 3 to determine type of head flange	Slip-on or weld ne Weld neck Slip-on or weld ne
	Side/Side Configurations A NPT B SW D Slip-on RF Flange @ E Weldneck RF Flange Chamber rating codes A, B & C only F Weldneck RJ Flange Chamber rating codes C, D, E & F only Side/Bottom Configurations G NPT H SW K Slip-on RF Flange @ L Weldneck RJ Flange Chamber rating codes A, B & C only M Weldneck RJ Flange Chamber rating codes C, D, E & F only @ Process connection materials will match chamber materials @ See page 3 to determine type of head flange	Slip-on or weld ne
	Side/Side Configurations A NPT B SW D Slip-on RF Flange ® E Weldneck RF Flange Chamber rating codes A, B & C only F Weldneck RJ Flange Chamber rating codes C, D, E & F only Side/Bottom Configurations G G NPT H SW K Slip-on RF Flange @ L Weldneck RJ Flange Chamber rating codes A, B & C only M Weldneck RJ Flange Chamber rating codes C, D, E & F only ® Process connection materials will match chamber materials @ Process connection materials will match chamber materials @ See page 3 to determine type of head flange % Cannot use slip-on flanges on 2" or 3", 5000 psi for B31.3, nor on 2" or 3", ≥600# for B31.1	Slip-on or weld ne Weld neck Slip-on or weld ne
	Side/Side Configurations A NPT B SW D Slip-on RF Flange @ E Weldneck RF Flange Chamber rating codes A, B & C only F Weldneck RJ Flange Chamber rating codes C, D, E & F only Side/Bottom Configurations G G NPT H SW K Slip-on RF Flange @ L Weldneck RF Flange Chamber rating codes A, B & C only M Weldneck RJ Flange Chamber rating codes C, D, E & F only @ Process connection materials will match chamber materials @ See page 3 to determine type of head flange @ Cannot use slip-on flanges on 2" or 3", 5000 psi for B31.3, nor on 2" or 3", ≥600# for B31.1 MEASURING RANGE 12 to 240 inches, fourth digit numeric	Slip-on or weld ne Weld neck Slip-on or weld ne
	Side/Side Configurations A NPT B SW D Slip-on RF Flange ® E Weldneck RF Flange Chamber rating codes A, B & C only F Weldneck RJ Flange Chamber rating codes C, D, E & F only Side/Bottom Configurations G G NPT H SW K Slip-on RF Flange @ L Weldneck RJ Flange Chamber rating codes A, B & C only M Weldneck RJ Flange Chamber rating codes C, D, E & F only ® Process connection materials will match chamber materials @ Process connection materials will match chamber materials @ See page 3 to determine type of head flange % Cannot use slip-on flanges on 2" or 3", 5000 psi for B31.3, nor on 2" or 3", ≥600# for B31.1	Slip-on or weld ne Weld neck Slip-on or weld ne
	Side/Side Configurations A NPT B SW D Slip-on RF Flange @ E Weldneck RF Flange Chamber rating codes A, B & C only F Weldneck RJ Flange Chamber rating codes C, D, E & F only Side/Bottom Configurations G G NPT H SW K Slip-on RF Flange @ L Weldneck RF Flange Chamber rating codes A, B & C only M Weldneck RJ Flange Chamber rating codes C, D, E & F only @ Process connection materials will match chamber materials @ See page 3 to determine type of head flange @ Cannot use slip-on flanges on 2" or 3", 5000 psi for B31.3, nor on 2" or 3", ≥600# for B31.1 MEASURING RANGE 12 to 240 inches, fourth digit numeric	Slip-on or weld ne Weld neck Slip-on or weld ne
	Side/Side Configurations A NPT B SW D Slip-on RF Flange @ E Weldneck RF Flange Chamber rating codes A, B & C only F Weldneck RJ Flange Chamber rating codes C, D, E & F only Side/Bottom Configurations G G NPT H SW K Slip-on RF Flange @ L Weldneck RF Flange Chamber rating codes A, B & C only M Weldneck RJ Flange Chamber rating codes C, D, E & F only @ Process connection materials will match chamber materials @ See page 3 to determine type of head flange @ Cannot use slip-on flanges on 2" or 3", 5000 psi for B31.3, nor on 2" or 3", ≥600# for B31.1 MEASURING RANGE 12 to 240 inches, fourth digit numeric	Slip-on or weld ne Weld neck Slip-on or weld ne
	Side/Side Configurations A NPT B SW D Slip-on RF Flange @ E Weldneck RF Flange Chamber rating codes A, B & C only F Weldneck RJ Flange Chamber rating codes C, D, E & F only Side/Bottom Configurations G G NPT H SW K Slip-on RF Flange @ L Weldneck RF Flange Chamber rating codes A, B & C only M Weldneck RJ Flange Chamber rating codes C, D, E & F only @ Process connection materials will match chamber materials @ See page 3 to determine type of head flange @ Cannot use slip-on flanges on 2" or 3", 5000 psi for B31.3, nor on 2" or 3", ≥600# for B31.1 MEASURING RANGE 12 to 240 inches, fourth digit numeric	Slip-on or weld ne Weld neck Slip-on or weld ne
	Side/Side Configurations A NPT B SW D Slip-on RF Flange @ E Weldneck RF Flange Chamber rating codes A, B & C only F Weldneck RJ Flange Chamber rating codes C, D, E & F only Side/Bottom Configurations G G NPT H SW K Slip-on RF Flange @ L Weldneck RF Flange Chamber rating codes A, B & C only M Weldneck RJ Flange Chamber rating codes C, D, E & F only @ Process connection materials will match chamber materials @ See page 3 to determine type of head flange @ Cannot use slip-on flanges on 2" or 3", 5000 psi for B31.3, nor on 2" or 3", ≥600# for B31.1 MEASURING RANGE 12 to 240 inches, fourth digit numeric	Slip-on or weld ne
	Side/Side Configurations A NPT B SW D Slip-on RF Flange @ E Weldneck RF Flange Chamber rating codes A, B & C only F Weldneck RJ Flange Chamber rating codes C, D, E & F only Side/Bottom Configurations G G NPT H SW K Slip-on RF Flange @ L Weldneck RF Flange Chamber rating codes A, B & C only M Weldneck RJ Flange Chamber rating codes C, D, E & F only @ Process connection materials will match chamber materials @ See page 3 to determine type of head flange @ Cannot use slip-on flanges on 2" or 3", 5000 psi for B31.3, nor on 2" or 3", ≥600# for B31.1 MEASURING RANGE 12 to 240 inches, fourth digit numeric	Slip-on or weld ne

QUALITY



The quality assurance system in place at Magnetrol guarantees the highest level of quality throughout the company. Magnetrol is committed to providing full customer satisfaction both in quality products and quality service.

Magnetrol's quality assurance system is registered to ISO 9001 affirming its commitment to known international quality standards providing the strongest assurance of product/service quality available.

WARRANTY



All Magnetrol mechanical level and flow controls are warranted free of defects in materials or workmanship for five full years from the date of original factory shipment.

If returned within the warranty period; and, upon factory inspection of the control, the cause of the claim is determined to be covered under the warranty; then, Magnetrol will repair or replace the control at no cost to the purchaser (or owner) other than transportation.

Magnetrol shall not be liable for misapplication, labor claims, direct or consequential damage or expense arising from the installation or use of equipment. There are no other warranties expressed or implied, except special written warranties covering some Magnetrol products.



5300 Belmont Road • Downers Grove, Illinois 60515-4499 • 630-969-4000 • Fax 630-969-9489 • www.magnetrol.com 6291 Dorman Road • Mississauga, Ontario L4V-1H2 • 905-678-2720 • Fax 905-678-7407 Heikenstraat 6 • B 9240 Zele, Belgium • 052 45.11.11 • Telex 25944 • Fax 052 45.09.93 Regent Business Ctr., Jubilee Rd. • Burgess Hill, Sussex RH15 9TL U.K. • 01444-871313 • Fax 01444-871317

©2001 Magnetrol International, Incorporated. All rights reserved. Printed in the USA. Magnetrol and Magnetrol logotype are registered trademarks of Magnetrol International.

Performance specifications are effective with date of issue and are subject to change without notice. The brand and product names contained within this document are trademarks or registered trademarks of their respective holders. BULLETIN: 41-140.0 EFFECTIVE: March 2001