

INSTALLATION, OPERATION & MAINTENANCE INSTRUCTIONS

1455 Kleppe Lane +Sparks, NV 89431-6467 +(775) 359-4712 +Fax (775) 359-7424 E-mail: <u>haws@hawsco.com</u> + website: <u>www.hawsco.com</u>

No. 2080039(9)

Model 7360BTWC Eyewash

NOTE TO INSTALLER: Please leave this information with the Maintenance Department.

LIMITED WARRANTY

HAWS warrants that this specific product is guaranteed against defective material or poor workmanship for a period of **one year from date of shipment**. HAWS liability under this warranty shall be discharged by furnishing without charge F.O.B. HAWS Factory any goods, or part thereof, which shall appear to the Company upon inspection to be of defective material or not of first class workmanship, provided that claim is made in writing to Haws within a reasonable period after receipt of the product. Where claims for defects are made, the defective part or parts shall be delivered to the Company, prepaid, for inspection. HAWS will not be liable for the cost of repairs, alterations or replacements, or for any expense connected therewith made by the owner or his agents, except upon written authority from HAWS, Sparks, Nevada. HAWS will not be liable for any damages caused by defective materials or poor workmanship, except for replacements, as provided above. Buyer agrees that Haws has made no other warranties either expressed or implied in addition to those above stated, except that of title with respect to any of the products or equipment sold hereunder and that HAWS shall not be liable for general, special, or consequential damages claimed to arise under the contract of sale.

The emergency equipment manufactured by HAWS is warranted to function if installation and maintenance instructions provided are adhered to. The units also must be used for the purpose for which they were intended. This product is intended to supplement first-aid treatment. Due to widely varying conditions, Haws cannot guarantee that the use of this emergency equipment will prevent serious injury or the aggravation of existing or prior injuries.

NO OTHER WARRANTIES EXPRESSED OR IMPLIED ARE AUTHORIZED, PROVIDED OR GIVEN BY HAWS.

SHOULD YOU EXPERIENCE DIFFICULTY WITH THE INSTALLATION OF THIS MODEL PLEASE CALL:

TECHNICAL SUPPORT: 1-800-766-5612

FOR CUSTOMER SERVICE: 1-888-640-4297

LOCATION OF UNIT: The Model 7360BTWC Emergency Eyewash unit should be installed in close proximity to potential accident areas. It should be clearly identified, free from obstructions and easy to access.

SUPPLY LINE: The minimum recommended line size is 1/2" IPS with 30-90 psi (2-6 ATM) flowing pressure. Where sediment or mineral content is a problem, an inlet filter is recommended.

PLUMBING CONNECTIONS: Inlet supply is female 1/2" IPS. Waste outlet is 1-1/4" IPS.


	TROUBL	OTING REPAIR CHECKLIST		
1.	No flow.	1.		Check the main shut-off valve.
2.	Insufficient water flow.	2.	a. b.	Verify minimum 30 psi (2 ATM) flowing supply line pressure. Probable clogging of flow control due to inadequate line flushing. Unscrew eye/face wash head and remove the four screws to disassemble the head. Clean flow control and reassemble head. See SP65 Installation Drawing for details.
3.	Eyewash stream does not meet desired eye level.	3.		Possible blocked flow control, see above solution. Possible non-leveled eyewash assembly.
4.	Water does not drain properly.	4.		Check the main waste line of your building to see if it does handle the capacity required for the entire drainage system.

For more information about Haws products, see our website: www.hawsco.com

© 2017 Haws[®] Corporation – All Rights Reserved HAWS[®] and other trademarks used in these materials are the exclusive property of Haws Corporation.


THIS DOCUMENT IS TRUE AND CORRECT AT TIME OF PUBLICATION. CONTINUED PRODUCT IMPROVEMENTS MAKE SPECIFICATIONS AND MEASUREMENTS SUBJECT TO CHANGE WITHOUT NOTICE.	ITEM	DESCRIPTION	PART NO.
	1	EYE/FACE WASH ASSY	SP65
	2	BOWL EYEWASH SS	SP90
	3	VALVE ASSY W/ FLAG	SP229
	4	EYEWASH SIGN	SP175
	5	TEST TAG	SP170
	6	EYEWASH STRAINER	SP509
	7	STRAINER REPAIR KIT	VRKEWSTR
<image/> <section-header><section-header><text><text><text></text></text></text></section-header></section-header>		SPARKS, NI (775) 359-4712 F	PPE LANE EVADA 89431 FAX (775) 359-7424 @HAWSCO.COM
ECN NO. REVISED PER BY . ECN: 5175 VI	MODE	WEBSITE: WW	N.HAWSCO.COM PART NUMBER 0002080039
	KD NC 7 SCALE:		REVISION 9 ZE: A SHEET 1 OF 1
©2017 Haws Corporation - All Rights Reserved			GE 3 OF 5

©2017 Haws Corporation - All Rights Reserved HAWS[®] and other trademarks used in these materials are the exclusive property of Haws Corporation.

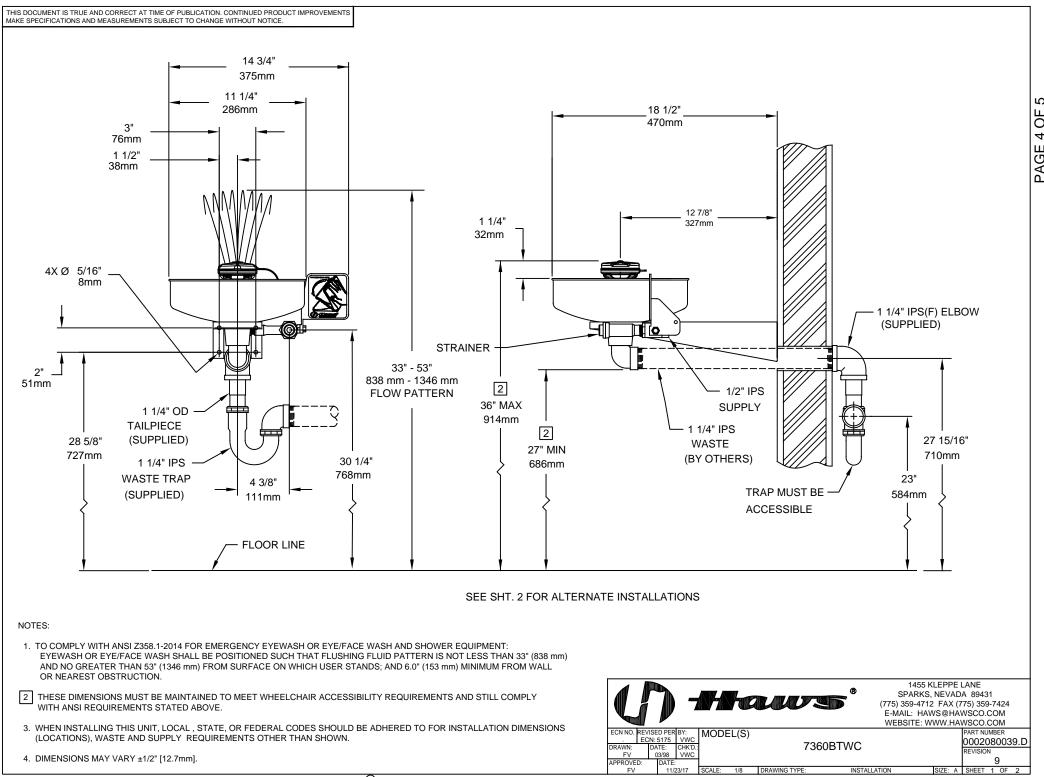

©2017 Haws Corporation - All Rights Reserved. HAWS[®] and other trademarks used in these materials are the exclusive property of Haws Corporation.



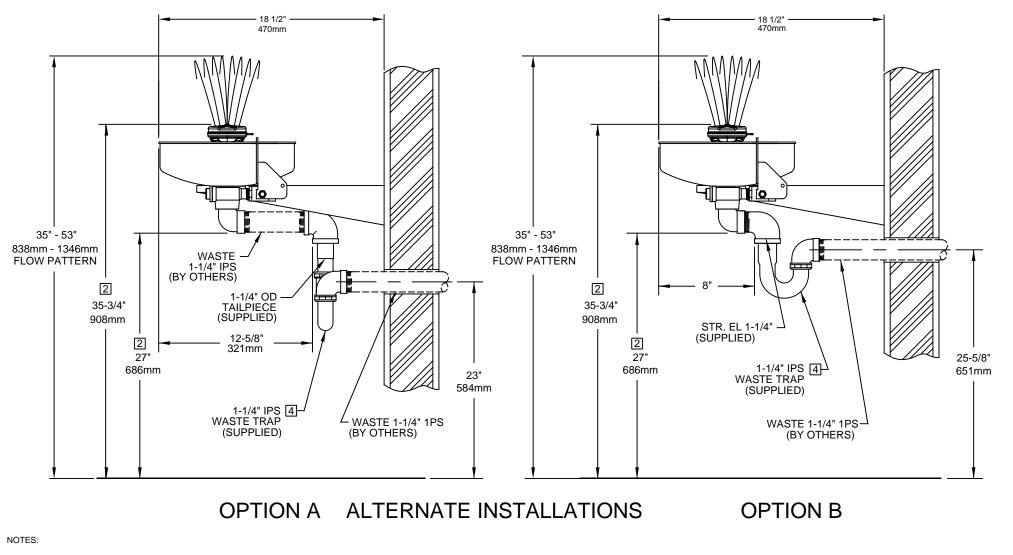

- TO COMPLY WITH ANSI Z358.1-2014 FOR EMERGENCY EYEWASH OR EYE/FACE WASH AND SHOWER EQUIPMENT: EYEWASH OR EYE/FACE WASH SHALL BE POSITIONED SUCH THAT FLUSHING FLUID PATTERN IS NOT LESS THEN 33" (838mm) AND NO GREATER THAN 53" (1346 mm) FROM SURFACE ON WHICH USER STANDS, AND 6.0" (153 mm) MINIMUM FROM WALL OR NEAREST OBSTRUCTION.
- 2 THESE DIMENSIONS MUST BE MAINTAINED TO MEET WHEELCHAIR ACCESSIBILITY REQUIREMENTS AND STILL COMPLY WITH ANSI REQUIREMENTS STATED ABOVE.
- 3. WHEN INSTALLING THIS UNIT, LOCAL , STATE, OR FEDERAL CODES SHOULD BE ADHERED TO FOR INSTALLATION DIMENSIONS (LOCATIONS), WASTE AND SUPPLY REQUIREMENTS OTHER THAN SHOWN.
- 4. DIMENSIONS MAY VARY ±1/2" [12.7mm].
- 5. TRAP SHOULD BE WRAPPED TO PROVIDE ADDITIONAL USER PROTECTION.



PAGE 5 OF 5

©2017 Haws Corporation - All Rights Reserved. HAWS[®] and other trademarks used in these materials are the exclusive property of Haws Corporation.