

Rosemount™ 2088, 2090F, and 2090P Pressure Transmitter

with 4–20 mA HART® and 1–5 Vdc Low Power
HART Protocol (Revision 5 and 7)



NOTICE

This guide provides basic guidelines for Rosemount 2088, 2090F, and 2090P Transmitters. It does not provide instructions for configuration, diagnostics, maintenance, service, troubleshooting, Explosion-proof, Flameproof, or intrinsically safe (I.S.) installations. See the Rosemount 2088 [Reference Manual](#) for more information. This manual is also available electronically on Emerson.com/Rosemount.

⚠ WARNING

Explosions could result in death or serious injury.

Installation of these transmitters in an explosive environment must be in accordance with the appropriate local, national, and international standards, codes, and practices. Review the approvals section of the Rosemount 2088 [Reference Manual](#) for any restrictions associated with a safe installation.

- Before connecting a HART-based communicator in an explosive atmosphere, make sure the instruments in the loop are installed in accordance with intrinsically safe or non-incendive field wiring practices.
- In an Explosion-proof/Flameproof installation, do not remove the transmitter covers when power is applied to the unit.

Process leaks may cause harm or result in death.

To avoid process leaks, only use the O-ring designed to seal with the corresponding flange adapter.

Electrical shock can result in death or serious injury.

Avoid contact with the leads and the terminals. High voltage that may be present on leads can cause electrical shock.

Conduit/cable entries

Unless marked, the conduit/cable entries in the transmitter housing use a 1/2-14 NPT thread form. Entries marked "M20" are M20 x 1.5 thread form. On devices with multiple conduit entries, all entries will have the same thread form. Only use plugs, adapters, glands or conduit with compatible thread form when closing these entries.

Contents

System readiness	3	Verify transmitter configuration	10
Mount the transmitter	4	Trim the transmitter	14
Set the switches	7	Safety instrumented systems installation	16
Connect the wiring and power up	8	Product certifications	17

1.0 System readiness

1.1 Confirm HART revision capability

- If using HART-based control or asset management systems, confirm the HART capability of those systems prior to transmitter installation. Not all systems are capable of communicating with HART Revision 7 Protocol. This transmitter can be configured for either HART Revision 5 or 7.
- For instructions on how to change the HART revision of the transmitter, see page 14.

1.2 Confirm correct device driver

- Verify the latest device driver (DD/DTM™) is loaded on your systems to ensure proper communication.

Note

The Rosemount 2088, 2090F, and 2090P Transmitters all use Rosemount 2088 Device Revisions and Drivers.

1. Download the latest DD at Emerson.com or FieldCommGroup.org.
2. In the *Browse by Member* dropdown menu, select **Emerson**.
3. Select desired product.
 - a. Reference [Table 1](#) and [Table 2](#), *Find Device Driver Files* column to find the correct device driver.

Table 1. Rosemount 2088 and 2090 with 4–20 mA HART Protocol Device Revisions and Files

Release date	Device identification			Device driver identification		Review instructions	Review functionality
	NAMUR hardware revision ⁽¹⁾	NAMUR software revision ¹	HART software revision ⁽²⁾	HART universal revision	Device revision ⁽³⁾	Reference manual	Change description
Aug-16	1.1.xx	1.0.xx	3	7	10	Rosemount 2088 Reference Manual	(5)
				5	9		
Jan-13	N/A	1.0.xx	1	7	10	Rosemount 2090 Reference Manual	(4)
				5	9		
Jan-98	N/A	N/A	178	5	3		N/A

1. NAMUR revision is located on the hardware tag of the device. Differences in level 3 changes, signified above by xx, represent minor product changes as defined per NE53. Compatibility and functionality are preserved and product can be used interchangeably.
2. HART software revision can be read using a HART capable configuration tool. Value shown is minimum revision that could correspond to NAMUR revisions.
3. Device driver file names use device and DD revision, e.g. 10_01. HART Protocol is designed to enable legacy device driver revisions to continue to communicate with new HART devices. To access new functionality, the new device driver must be downloaded. It is recommended to download new device driver files to ensure full functionality.
4. HART Revision 5 and 7 selectable, Local Operator Interface (LOI), scaled variable, configurable alarms, expanded engineering units.
5. Updated electronics hardware design. Intrinsic Safety temperature classification change.

Table 2. Rosemount 2088 with 1–5 Vdc Low Power HART Protocol Device Revisions and Files

Release date	Device identification			Device driver identification		Review instructions	Review functionality
	NAMUR hardware revision ⁽¹⁾	NAMUR software revision ¹	HART software revision ⁽²⁾	HART universal revision	Device revision ⁽³⁾	Reference manual	Change description
Jan-13	N/A	1.0.2	3	7	10	Rosemount 2088 Reference Manual	(4)
				5	9		
Jan-98	N/A	N/A	178	5	3	Rosemount 2090 Reference Manual	N/A

1. NAMUR Revision is located on the hardware tag of the device. Differences in level 3 changes, signified above by xx, represent minor product changes as defined per NE53. Compatibility and functionality are preserved and product can be used interchangeably.
2. HART software revision can be read using a HART capable configuration tool. Value shown is minimum revision that could correspond to NAMUR revisions.
3. Device driver file names use device and DD revision, e.g. 10_01. HART Protocol is designed to enable legacy device driver revisions to continue to communicate with new HART devices. To access new functionality, the new device driver must be downloaded. It is recommended to download new device driver files to ensure full functionality.
4. HART Revision 5 and 7 selectable, LOI, scaled variable, configurable alarms, expanded engineering units.

2.0 Mount the transmitter

2.1 Rosemount 2088

Mount directly to the impulse line without using an additional mounting bracket or mount directly to a wall, panel, or 2-in. pipe using an optional mounting bracket.

2.2 Rosemount 2090P


Mount directly to the process pipe using an existing weld spud, or have a skilled welder install a new weld spud using a TIG welder. See [Rosemount 2088 Reference Manual](#) for complete welding instructions. Improper installation may result in weld spud distortion. Upright or horizontal position mounting is recommended to allow proper draining of vent.

2.3 Rosemount 2090F


Mount directly to the process pipe using a standard sanitary fitting (either a 1.5- or 2-in. Tri-Clamp® connection). Upright or horizontal position mounting is recommended to allow proper draining of vent.

Figure 1. Transmitter Direct Mounting


Do not apply torque directly to the electronics housing. To avoid damage, apply torque only to the hex-shaped process connection.

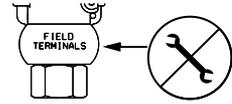


Rosemount 2088

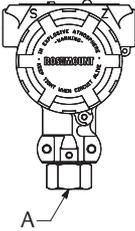

Rosemount 2090P

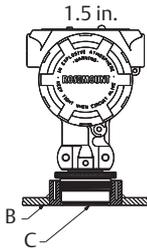

Rosemount 2090F

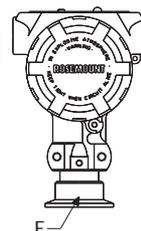


- A. 1/2–14 NPT female process connection
- B. Vessel wall
- C. Weld spud


- D. O-ring
- E. 1 1/2- or 2-in. Tri-Clamp connection

Figure 2. Panel and Pipe Mounting

Panel mount

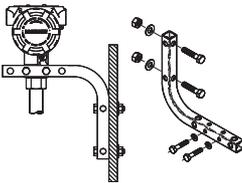

Pipe mount

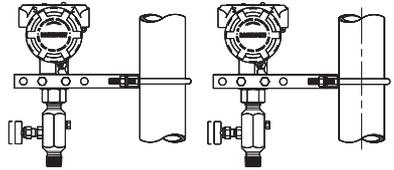


2.4 Environmental seal for housing

Thread sealing (PTFE) tape or paste on male threads of conduit is required to provide a water/dust tight conduit seal and meets requirements of NEMA® Type 4X, IP66, and IP68. Consult factory if other Ingress Protection ratings are required.

For M20 threads, install conduit plugs to full thread engagement or until mechanical resistance is met.


2.5 Liquid flow applications

1. Place taps to the side of the line.
2. Mount beside or below the taps.
3. Mount the transmitter so the drain/vent valves are oriented upward.

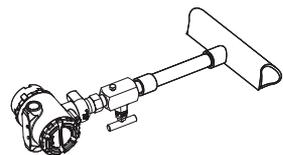


2.6 Gas flow applications

1. Place taps in the top or side of the line.
2. Mount level or above the taps.

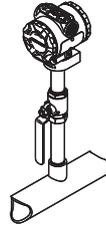

2.7 Steam flow applications

1. Place taps to the side of the line.
2. Mount beside or below the taps.
3. Fill impulse lines with water.

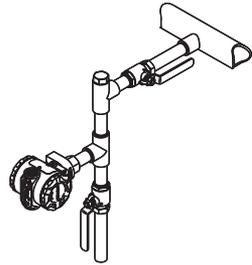


2.8 Gage transmitter orientation

The low side pressure port (atmospheric reference) on the in-line gage transmitter is located in the neck of the transmitter, behind the housing. The vent path is 360° around the transmitter between the housing and sensor (see Figure 3).

CAUTION

Keep the vent path free of any obstruction, including but not limited to paint, dust, and lubrication by mounting the transmitter so the contaminants can drain away.

Figure 3. Gage Low Side Pressure Port

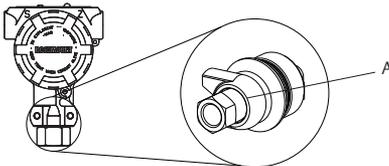

A. Low side pressure port (atmospheric reference)

3.0 Set the switches


Set alarm and security switch configuration before installation as shown in Figure 4.

- The alarm switch sets the analog output alarm to high or low. Default alarm is high.
- The security switch allows () or prevents () any configuration of the transmitter. Default security is off ().

Use the following procedure to change the switch configuration:

1. If the transmitter is installed, secure the loop, and remove power.
2. Remove the housing cover opposite the field terminal side. Do not remove the instrument cover in explosive atmospheres when the circuit is live.
3. Slide the security and alarm switches into the preferred position using a small screwdriver.
4. Reattach the transmitter cover. The cover must be fully engaged to comply with explosion-proof requirements.

Figure 4. Transmitter Electronics Board

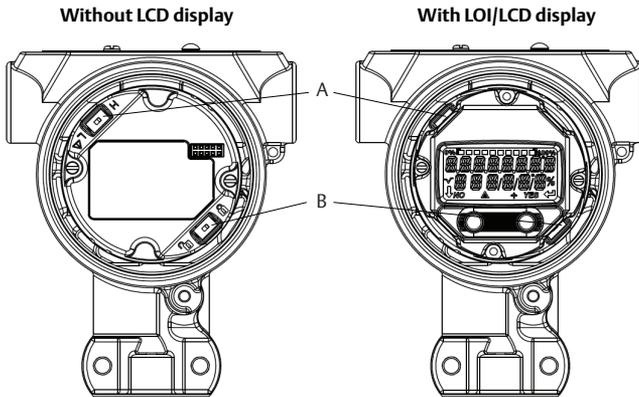

- A. Alarm
B. Security

3.1 Electronics board

The Rosemount 2088 and 2090 electronics board should not be tampered with or removed from the housing as it could cause permanent damage to the transmitter.


3.2 LOI/LCD display

The LOI/LCD display can be removed and rotated as needed by following the “Rotating LCD display/LOI display” instructions in the [Rosemount 2088 Reference Manual](#).

4.0 Connect the wiring and power up


Shielded twisted pair cable should be used for best results. Use 24 AWG or larger wire that does not exceed 5000 ft. (1500 m) in length. If applicable, install wiring with a drip loop. Arrange the drip loop so the bottom is lower than the conduit connections and the transmitter housing.

Figure 5. Wiring the Transmitter (4–20 mA HART)

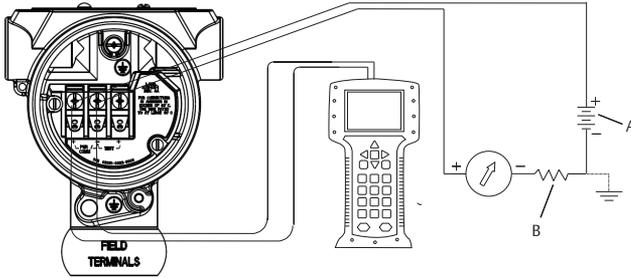

- A. Vdc supply
B. $R_L \geq 250$ (necessary for HART Communication only)

Figure 6. Wiring the Transmitter (1–5 Vdc Low Power)

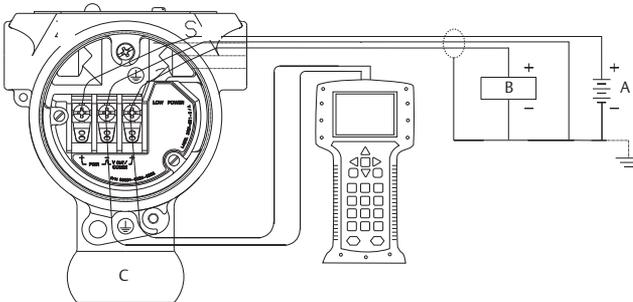

- A. Power supply
B. Voltmeter
C. Field terminals

CAUTION

- Installation of the transient protection terminal block does not provide transient protection unless the transmitter case is properly grounded.
- Do not run signal wiring in conduit or open trays with power wiring, or near heavy electrical equipment.
- Do not connect the powered signal wiring to the test terminals. Power could damage the test diode in the terminal block.

Use the following steps to wire the transmitter:


1. Remove the housing cover on the FIELD TERMINALS side.
2. Connect the leads as shown in [Figure 5](#) or [Figure 6](#).
3. Tighten the terminal screws to ensure full contact with the terminal block screw and washer. When using a direct wiring method, wrap wire clockwise to ensure it is in place when tightening the terminal block screw.

Note

The use of a pin or ferrule wire terminal is not recommended as the connection may be more susceptible to loosening over time or under vibration.

4. Ground housing to fulfill local grounding regulations.
5. Ensure proper grounding. It is important that the instrument cable shield:
 - Be trimmed close and insulated from touching the transmitter housing
 - Be connected to the next shield if cable is routed through a junction box
 - Be connected to a good earth ground at the power supply end
6. If transient protection is needed, refer to [Grounding for transient terminal block](#) for grounding instructions.
7. Plug and seal unused conduit connections.
8. Replace the housing cover.

Figure 7. Grounding

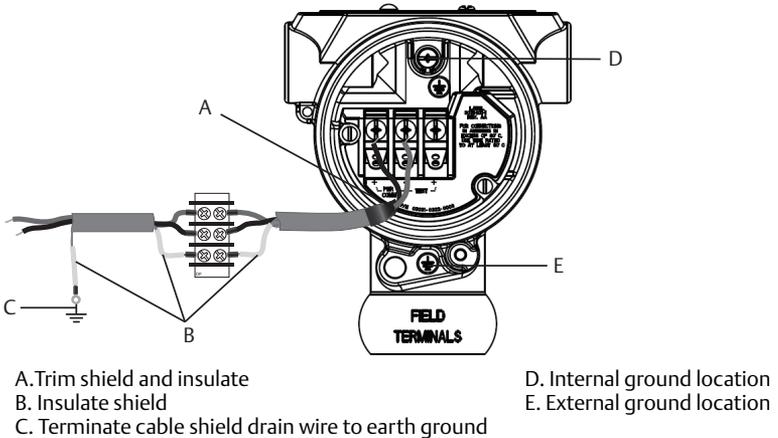

- A. Trim shield and insulate
 B. Insulate shield
 C. Terminate cable shield drain wire to earth ground
 D. Internal ground location
 E. External ground location

4.1 Grounding for transient terminal block

Ground termination is provided on the outside of the electronics housing and inside the terminal compartment. These grounds are used when the transient protection terminal blocks are installed. It is recommended that 18 AWG or larger wire is used to connect housing ground to earth ground (internal or external).

If the transmitter is currently not wired for power up and communication (follow steps in “[Connect the wiring and power up](#)” on page 8. When the transmitter is properly wired, refer to [Figure 7](#) for internal and external transient grounding locations.

5.0 Verify transmitter configuration

Verify the configuration using any HART capable configuration tool or LOI - option code M4. Configuration instructions for a Field Communicator and LOI are included in this step. See Rosemount 2088 [Reference Manual](#) for configuration instructions using AMS Device Manager.

5.1 Verifying configuration with a Field Communicator

A Rosemount 2088 DD must be installed on the Field Communicator to verify configuration. Fast Key sequences vary depending on device and DD revisions. Use the [Determine Fast Key sequence table](#) process below to identify the appropriate Fast Key sequences.

5.2 Field Communicator User Interface

Determine Fast Key sequence table

1. Connect Field Communicator to Rosemount 2088, 2090F, or 2090P.
2. If *Home* screen matches [Figure 8](#), refer to [Table 3](#) for Fast Key sequences.
3. If *Home* screen matches [Figure 9](#):
 - a. Perform Fast Key sequence 1,7,2 to identify Field Revision and HART Revision.
 - b. Refer to [Table 4](#) and the appropriate column based on your Field Revision and HART Revision for Fast Key sequences.

Note

Emerson recommends installing the latest DD to access the complete functionality. Visit Emerson.com or FieldCommGroup.org.

Figure 8. Traditional Interface


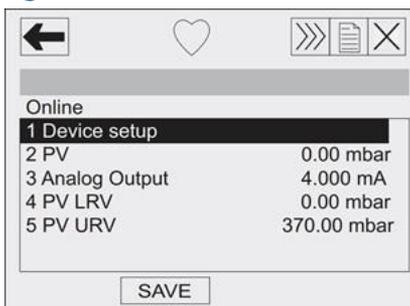


Figure 9. Device Dashboard

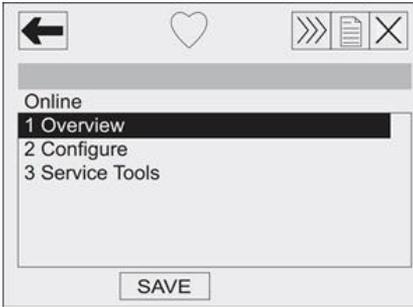

Note

A check (✓) indicates the basic configuration parameters. At minimum, these parameters should be verified as part of the configuration and startup procedure.

Table 3. Traditional Interface Fast Key

	Function	Fast Key sequence
✓	Analog Output Alarm	1, 4, 3, 2, 4
	Burst Mode Control	1, 4, 3, 3, 3
	Burst Option	1, 4, 3, 3, 4
	Calibration	1, 2, 3
✓	Damping	1, 3, 5
	Date	1, 3, 4, 1
	Descriptor	1, 3, 4, 2
	Digital To Analog Trim (4–20 mA Output)	1, 2, 3, 2, 1
	Disable Local Span/Zero Adjustment	1, 4, 4, 1, 7
	Field Device Info	1, 4, 4, 1
	Keypad Input	1, 2, 3, 1, 1
	Loop Test	1, 2, 2
	Lower Range Value	4, 1
	Lower Sensor Trim	1, 2, 3, 3, 2
	Message	1, 3, 4, 3
	Meter Type	1, 3, 6, 1
	Number of Requested	1, 4, 3, 3, 2
	Output Trim	1, 2, 3, 2
	Percent Range	1, 1, 2
	Poll Address	1, 4, 3, 3, 1
✓	Range Values	1, 3, 3
	Rerange	1, 2, 3, 1

Table 3. Traditional Interface Fast Key

Function	Fast Key sequence
Scaled D/A Trim (4–20 mA)	1, 2, 3, 2, 2
Self Test (Transmitter)	1, 2, 1, 1
Sensor Info	1, 4, 4, 2
Sensor Trim (Full Trim)	1, 2, 3, 3
Sensor Trim Points	1, 2, 3, 3, 5
Status	1, 2, 1, 2
✓ Tag	1, 3, 1
Transmitter Security (Write Protect)	1, 3, 4, 4
✓ Units (Process Variable)	1, 3, 2
Upper Range Value	5, 2
Upper Sensor Trim	1, 2, 3, 3, 3
Zero Trim	1, 2, 3, 3, 1

Note

A check (✓) indicates the basic configuration parameters. At minimum, these parameters should be verified as part of the configuration and startup procedure.

Table 4. Device Dashboard Fast Keys

Function	Fast Key Sequence		
	Rev 3	Rev 5	Rev 7
Field Revision	Rev 3	Rev 5	Rev 7
HART Revision	HART 5	HART 5	HART 7
✓ Alarm and Saturation Levels	N/A	2, 2, 2, 5, 7	2, 2, 2, 5, 7
✓ Damping	2, 2, 1, 2	2, 2, 1, 1, 5	2, 2, 1, 1, 5
✓ Range Values	2, 2, 2	2, 2, 2	2, 2, 2
✓ Tag	2, 2, 6, 1, 1	2, 2, 7, 1, 1	2, 2, 7, 1, 1
✓ Transfer Function	2, 2, 1, 3	2, 2, 1, 1, 6	2, 2, 1, 1, 6
✓ Units	2, 2, 1, 1	2, 2, 1, 1, 4	2, 2, 1, 1, 4
Burst Mode	2, 2, 4, 1	2, 2, 5, 3	2, 2, 5, 3
Custom Display Configuration	2, 2, 3	2, 2, 4	2, 2, 4
Date	2, 2, 6, 1, 4	2, 2, 7, 1, 3	2, 2, 7, 1, 4
Descriptor	2, 2, 6, 1, 5	2, 2, 7, 1, 4	2, 2, 7, 1, 5
Digital to Analog Trim (4–20 mA Output)	3, 4, 2	3, 4, 2	3, 4, 2
Disable Configuration Buttons	2, 2, 5, 2	2, 2, 6, 3	2, 2, 6, 3
Rerange with Keypad	2, 2, 2	2, 2, 2, 1	2, 2, 2, 1
Loop Test	3, 5, 1	3, 5, 1	3, 5, 1
Upper Sensor Trim	3, 4, 1, 1	3, 4, 1, 1	3, 4, 1, 1
Lower Sensor Trim	3, 4, 1, 2	3, 4, 1, 2	3, 4, 1, 2
Message	2, 2, 6, 1, 5	2, 2, 7, 1, 5	2, 2, 7, 1, 6
Sensor Temperature/Trend	3, 3, 2	3, 3, 3	3, 3, 3
Digital Zero Trim	3, 4, 1, 3	3, 4, 1, 3	3, 4, 1, 3
Password	N/A	2, 2, 6, 4	2, 2, 6, 5


Table 4. Device Dashboard Fast Keys

Function	Fast Key Sequence		
	Rev 3	Rev 5	Rev 7
Field Revision	Rev 3	Rev 5	Rev 7
HART Revision	HART 5	HART 5	HART 7
Scaled Variable	N/A	3, 2, 2	3, 2, 2
HART Revision 5 to HART Revision 7 switch	N/A	2, 2, 5, 2, 3	2, 2, 5, 2, 3
Long Tag	N/A	N/A	2, 2, 7, 1, 2
Find Device	N/A	N/A	3, 4, 5
Simulate Digital Signal	N/A	N/A	3, 4, 5

5.3 Verifying configuration with LOI

The optional LOI can be used for commissioning the device. The LOI is a two-button design with internal and external buttons. The internal buttons are located on the display of the transmitter, while the external buttons are located underneath the top metal tag. To activate the LOI push any button. LOI button functionality is shown on the bottom corners of the display. See [Table 5](#) and [Figure 11](#) for button operation and menu information.

Figure 10. Internal and External LOI Buttons

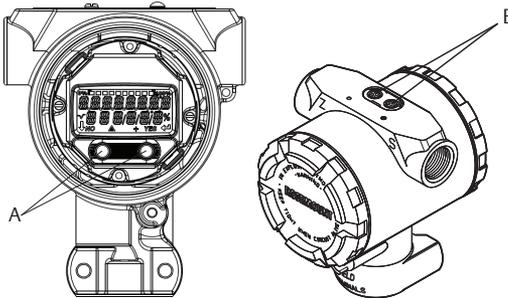

- A. Internal buttons
- B. External buttons


Note

See [Figure 12](#) on page 15 to confirm external button functionality.

Table 5. LOI Button Operation

Button	Left	Right
	No	SCROLL
	Yes	ENTER

Figure 11. LOI Menu

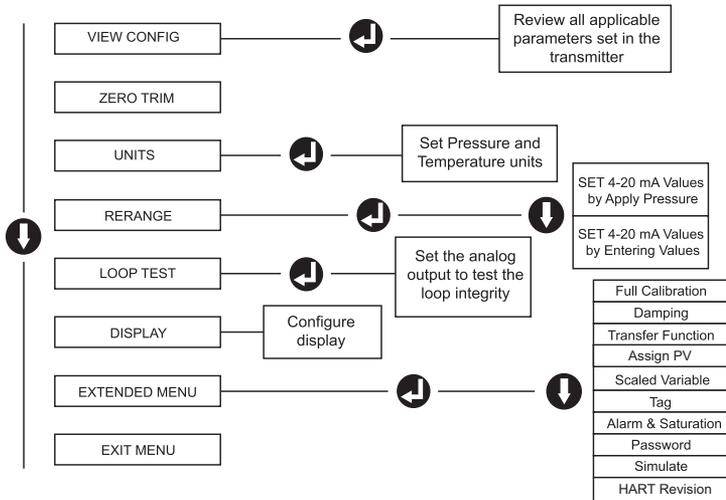

5.4 Switch HART revision mode

If the HART configuration tool is not capable of communicating with HART Revision 7, the Rosemount 2088, 2090F, or 2090P will load a generic menu with limited capability. The following procedures will switch the HART revision mode from the generic menu:

1. Go to *Manual Setup > Device Information > Identification > Message*.
 - a. To change to HART Revision 5, Enter: **"HART5"** in the *Message* field.
 - b. To change to HART Revision 7, Enter: **"HART7"** in the *Message* field.

6.0 Trim the transmitter

Devices are calibrated by the factory. Once installed, it is recommended to perform a zero trim on gage and absolute pressure transmitters to eliminate error due to mounting position or static pressure effects. A zero trim can be performed using either a Field Communicator or configuration buttons.

For instructions using AMS Device Manager, see the Rosemount 2088 [Reference Manual](#).

CAUTION

It is not recommended to zero an absolute transmitter.

1. Select trim procedure.
 - a. Analog zero trim – sets the analog output to 4 mA.
 - Also referred to as a “rerange,” it sets the Lower Range Value (LRV) equal to the measured pressure.
 - The display and digital HART output remains unchanged.

- b. Digital zero trim – recalibrates the sensor zero.
 - The LRV is unaffected. The pressure value will be zero (on display and HART output). 4 mA point may not be at zero.
 - This requires that the factory calibrated zero pressure is within a range of 3% of the URV [$0 \pm 3\% \times \text{URV}$].

Example

URV = 250 inH₂O

Applied Zero Pressure = $+0.03 \times 250 \text{ inH}_2\text{O} = +7.5 \text{ inH}_2\text{O}$ (compared to factory settings) values outside this range will be rejected by the transmitter

6.1 Trimming with a Field Communicator

1. Connect the Field Communicator, see “Connect the wiring and power up” on page 8 for instructions.
2. Follow the HART menu to perform the desired zero trim.

Table 6. Zero Trim Fast Keys


	Analog zero (Set 4 mA)	Digital zero
Fast Key sequence	3, 4, 2	3, 4, 1, 3

6.2 Trimming with configuration buttons

A zero trim is to be performed using one of the three possible sets of external configuration buttons located under the top tag.

To access the configuration buttons, loosen the screw and slide the tag on the top of the transmitter. Confirm the functionality using Figure 10.

Figure 12. External Configuration Buttons

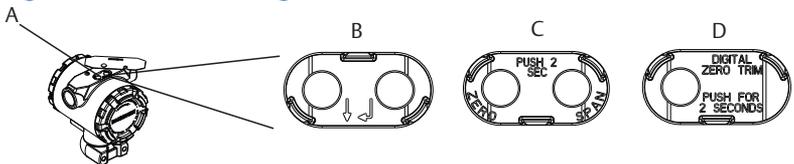

- A. Configuration buttons
- B. LOI
- C. Analog zero and span
- D. Digital zero

Use the following procedures to perform a zero trim:

Perform trim with LOI (option M4)

1. Set the transmitter pressure.
2. See Figure 10 on page 13 for the operating menu.
 - a. Select **Rerange** to perform an analog zero trim.
 - b. Select **Zero Trim** to perform a digital zero trim.

Perform trim with analog zero and span (option D4 or standard on Rosemount 2090F and 2090P)

1. Set the transmitter pressure.
2. Press and hold the **Zero** button for two seconds to perform an analog zero trim.

Perform trim with digital zero (option DZ)

1. Set the transmitter pressure.
2. Press and hold the **Zero** button for two seconds to perform a digital zero trim.

7.0 Safety instrumented systems installation

For safety certified installations, refer to Rosemount 2090 [Manual Supplement](#) for installation procedure and system requirements.

8.0 Product certifications

8.1 Rosemount 2090

Rev 2.1

European Directive Information

A copy of the EU Declaration of Conformity can be found at the end of the Quick Start Guide. The most recent revision of the EU Declaration of Conformity can be found at Emerson.com/Rosemount.

Ordinary Location Certification

As standard, the transmitter has been examined and tested to determine that the design meets the basic electrical, mechanical, and fire protection requirements by a nationally recognized test laboratory (NRTL) as accredited by the Federal Occupational Safety and Health Administration (OSHA).

North America

- E5** USA Explosionproof (XP) and Dust-Ignitionproof (DIP)
 Certificate: 1015441
 Standards: FM Class 3600 - 2011, FM, Class 3615 - 2006, FM class 3616 - 2011, FM Class 3810 - 2005, ANSI/NEMA 250 - 1991
 Markings: XP CL I, DIV 1, GP B, C, D; DIP CL II, DIV 1, GP E, F, G; CL III, DIV 1; T5(-40 °C ≤ T_a ≤ +85 °C); Conduit Seal Not Required; Type 4X
- I5** USA Intrinsic Safety (IS) and Nonincendive (NI)
 Certificate: 1015441
 Standards: FM Class 3600 - 2011, FM Class 3610 - 2010, FM Class 3611 - 2004, FM Class 3810 - 2005
 Markings: IS CL I, DIV 1, GP A, B, C, D; CL II, DIV 1, GP E, F, G; Class III T4(-50 °C ≤ T_a ≤ +70 °C); when connected per Rosemount drawing 02088-1024; NI CL 1, DIV 2, GP A, B, C, D; Type 4x
- C6** Canada Explosionproof, Intrinsic Safety and Division 2, Dust-Ignitionproof
 Certificate: 1015441
 Standards: CAN/CSA C22.2 No. 0-M91 (R2001), CSA Std C22.2 No. 25-1966, CSA Std C22.2 No. 30-M1986, CAN/CSA-C22.2 No. 94-M91, CSA Std C22.2 No. 142-M1987, CAN/CSA-C22.2 No. 157-92, CSA Std C22.2 No. 213-M1987, ANSI-ISA-12.27.01-2003
 Markings: Explosionproof for Class I, Division 1, Groups B, C and D; Class II, Groups E, F, and G; Class III; Intrinsically Safe Class I, Division 1 when connected in accordance with Rosemount drawing 02088-1024, Temperature Code T3C; Ex ia; Class I Division 2 Groups A, B, C and D; Type 4X; Factory Sealed

Europe

- ED** ATEX Flameproof
 Certificate: KEMA97ATEX2378X
 Standards: EN60079-0:2012 + A11:2013, EN60079-1:2014, EN60079-26:2015
 Markings:  II 1/2 G Ex db IIC T6...T4 Ga/Gb, T6(-60 °C ≤ T_a ≤ +70 °C), T4/T5(-60 °C ≤ T_a ≤ +80 °C);

Special Conditions for Safe Use (X):

1. This device contains a thin wall diaphragm. Installation, maintenance and use shall take into account the environmental conditions to which the diaphragm will be subjected. The manufacturer's instructions for installation and maintenance shall be followed in detail to assure safety during its expected lifetime.
2. Flameproof joints are not intended for repair.
3. Non-standard paint options may cause risk from electrostatic discharge. Avoid installations that could cause electrostatic build-up on painted surfaces, and only clean the painted surfaces with a damp cloth. If paint is ordered through a special option code, contact the manufacturer for more information.

I1 ATEX Intrinsic Safety

Certificate: BAS00ATEX1166X

Standards: EN60079-0:2012+A11:2013, EN60079-11:2012

Markings:  II 1 G Ex ia IIC T4 Ga (-55 °C ≤ T_a ≤ +70 °C)**Table 7. Input Parameters**

Parameters	HART
Voltage U _i	30 V
Current I _i	200 mA
Power P _i	0.9 W
Capacitance C _i	0.012 μF

Special Condition for Safe Use (X):

1. The apparatus is not capable of withstanding the 500 V insulation test required by EN60079-11. This must be taken into account when installing the apparatus.
2. The enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in a Zone 0 environment.

N1 ATEX Type n

Certificate: BAS00ATEX3167X

Standards: EN60079-0:2012+A11:2013, EN60079-15:2010

Markings:  II 3 G Ex nA IIC T5 Gc (-55 °C ≤ T_a ≤ +70 °C)**Special Condition for Safe Use (X):**

1. When fitted with a transient suppression terminal block, the equipment is not capable of withstanding the 500 V insulation test that is required by EN60079-15. This must be taken into account when installing the apparatus.

ND ATEX Dust

Certificate: BAS01ATEX1427X

Standards: EN60079-0:2012+A11:2013, EN60079-31:2009

Markings:  II 1 D Ex t IIIC T50 °C T₅₀₀ 60 °C Da**Special Conditions for Safe Use (X):**

1. Cable entries must be used which maintain the ingress protection of the enclosure to at least IP66.
2. Unused cable entries must be filled with suitable blanking plugs which maintain the ingress protection of the enclosure to at least IP66.
3. Cable entries and blanking plugs must be suitable for the ambient range of the apparatus and capable of withstanding a 7J impact test.

International

K7 IECEx Flameproof

Certificate: IECEx KEM 06.0021X

Standards: IEC60079-0:2011, IEC60079-1:2014, IEC60079-26:2014

Markings: Ex db IIC T6...T4 Ga/Gb, T6($-60\text{ °C} \leq T_a \leq +70\text{ °C}$), T4/T5($-60\text{ °C} \leq T_a \leq +80\text{ °C}$)

Special Condition for Safe Use (X):

1. The device contains a thin wall diaphragm less than 1 mm thickness that forms a boundary between EPL Ga (process connection) and EPL Gb (all other parts of the equipment). The model code and datasheet are to be consulted for details of the diaphragm material. Installation, maintenance and use shall take into account the environmental conditions to which the diaphragm shall be subjected. The manufacturer's instructions for installation and maintenance shall be followed in detail to assure safety during its expected lifetime.
2. Flameproof joints are not intended for repair.
3. Non-standard paint options may cause risk from electrostatic discharge. Avoid installations that could cause electrostatic build-up on painted surfaces, and only clean the painted surfaces with a damp cloth. If paint is ordered through a special option code, contact the manufacturer for more information.

IECEx Dust: see Approval Option NK

IECEx Intrinsic Safety

Certificate: IECEx BAS 12.0071X

Standards: IEC60079-0:2011, IEC60079-11:2011

Markings: Ex ia IIC T4 Ga ($-55\text{ °C} \leq T_a \leq +70\text{ °C}$)

Table 8. Input Parameters

Parameter	HART
Voltage U_i	30 V
Current I_i	200 mA
Power P_i	0.9 W
Capacitance C_i	0.012 μ F

Special Conditions for Safe Use (X):

1. When fitted with a transient suppression terminal block, the Rosemount 2088 is incapable of passing the 500 V isolation test. This must be taken into account during installation.
2. The enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in a Zone 0 environment.

IECEx Type n

Certificate: IECEx BAS 12.0072X

Standards: IEC60079-0:2011, IEC60079-15:2010

Markings: Ex nA IIC T5 Gc ($-40\text{ °C} \leq T_a \leq +70\text{ °C}$)

Special Condition for Safe Use (X):

1. When fitted with a transient suppression terminal block, the Rosemount 2088 is incapable of passing the 500 V isolation test. This must be taken into account during installation.

NK IECEx Dust

Certificate: IECEx BAS12.0073X

Standards: IEC60079-0:2011, IEC60079-31:2008

Markings: Ex t IIIC T50 °C T₅₀₀ 60 °C Da**Table 9. Input Parameters**

Parameter	HART
Voltage U _i	36 Vdc

Special Conditions for Safe Use (X):

1. Cable entries must be used which maintain the ingress protection of the enclosure to at least IP66.
2. Unused cable entries must be filled with suitable blanking plugs which maintain the ingress protection of the enclosure to at least IP66.
3. Cable entries and blanking plugs must be suitable for the ambient temperature range of the apparatus and capable of withstanding a 7 J impact test.

China**E3** China Flameproof

Certificate: GYJ15.1506X

Standards: GB3836.1-2010, GB3836.2-2010

Markings: Ex d IIC T6/T4 Gb, T6(-20 °C ≤ T_a ≤ +40 °C), T4(-20 °C ≤ T_a ≤ +80 °C)**Special Conditions of Use (X):**

1. The ambient temperature is as follows:

T _a	Temperature class
-20 °C ≤ T _a ≤ 80 °C	T4
-20 °C ≤ T _a ≤ 40 °C	T6

2. The earth connection facility on the enclosure should be connected reliably.
3. During installation in hazardous location, cable glands, conduits, and blanking plugs, certified by state-appointed inspection bodies with Ex d IIC type of protection, should be used.
4. During installation, use and maintenance in explosive gas atmospheres, observe the warning "Do not open when energized".
5. During installation, there should be no mixture harm to flameproof housing.
6. End user is not permitted to change any components insides, but to settle the problem in conjunction with manufacturer to avoid damage to the product.
7. Maintenance should be done in non-hazardous location.
8. During installation, use and maintenance of this product, observe the following standards: GB3836.13-2013, GB3836.15-2000, GB3836.16-2006, GB50257-2014

I3 China Intrinsic Safety

Certificate: GYJ15.1508X

Standards: GB3836.1-2010, GB3836.4-2010, GB3836.20-2010

Markings: Ex ia IIC T4 Ga

Special Conditions for Safe Use (X):

1. The enclosure may contain light metal, attention should be taken to avoid ignition hazard due to impact or friction when used in Zone 0.
2. When transient protection board is chosen (option code T1), this apparatus is not capable of withstanding the 500 V r.m.s insulation test required by Clause 6.3.12 of

GB3836.4-2010.

Technical Regulations Customs Union (EAC)

EM EAC Flameproof

Certificate: RU C-US.GB05.B.01197

Markings: Ga/Gb Ex d IIC T4/T6 X, T4(-40 °C ≤ T_a ≤ +80 °C), T6(-40 °C ≤ T_a ≤ +40 °C)

Special Condition for Safe Use (X):

1. See certificate for special conditions.

IM EAC Intrinsically Safe

Certificate: RU C-US.GB05.B.01197

Markings: 0Ex ia IIC T4 Ga X, T4(-55 °C ≤ T_a ≤ +70 °C)

Special Condition for Safe Use (X):

1. See certificate for special conditions.

Combinations

K1 Combination of ED, I1, ND, and N1

K5 Combination of E5 and I5

K6 Combination of C6, ED, and I1

KB Combination of K5 and C6

KM Combination of EM and IM

KH Combination of ED, I1, K5

Conduit Plugs and Adapters

IECEx Flameproof and Increased Safety

Certificate: IECEx FMG 13.0032X

Standards: IEC60079-0:2011, IEC60079-1:2007-04, IEC60079-7:2006-07

Markings: Ex de IIC Gb

ATEX Flameproof and Increased Safety

Certificate: FM13ATEX0076X

Standards: EN60079-0:2012, EN60079-1:2007, EN60079-7:2007

Markings: Ex II 2 G Ex de IIC Gb

Table 10. Conduit Plug Thread Sizes

Thread	Identification mark
M20 x 1.5-6g	M20
1/2-14 NPT	1/2 NPT
G ¹ /2A	G ¹ /2

Table 11. Thread Adapter Thread Sizes

Male thread	Identification mark
M20 x 1.5-6 H	M20
1/2-14 NPT	1/2-14 NPT
3/4-14 NPT	3/4-14 NPT
Female thread	Identification mark
M20 x 1.5-6 H	M20

Table 11. Thread Adapter Thread Sizes

1/2-14 NPT	1/2-14 NPT
PG 13.5	PG 13.5

Special Condition for Safe Use (X):

1. When the thread adapter or blanking plug is used with an enclosure in type of protection increased safety “e” the entry thread shall be suitably sealed in order to maintain the ingress protection rating (IP) of the enclosure.
2. The blanking plug shall not be used with an adapter.
3. Blanking Plug and Threaded Adapter shall be either NPT or Metric thread forms. G^{1/2} and PG 13.5 thread forms are only acceptable for existing (legacy) equipment installations.

8.2 Rosemount 2088

Rev 1.13

European Directive Information

A copy of the EU Declaration of Conformity can be found at the end of the Quick Start Guide. The most recent revision of the EU Declaration of Conformity can be found at Emerson.com/Rosemount.

Ordinary Location Certification

As standard, the transmitter has been examined and tested to determine that the design meets the basic electrical, mechanical, and fire protection requirements by a nationally recognized test laboratory (NRTL) as accredited by the Federal Occupational Safety and Health Administration (OSHA).

North America

- E5** USA Explosionproof (XP) and Dust-Ignitionproof (DIP)
 Certificate: 1V2A8.AE
 Standards: FM Class 3600 - 2011, FM, Class 3615 - 2006, FM class 3616 - 2011, FM Class 3810 - 2005, ANSI/NEMA 250 - 1991
 Markings: XP CL I, DIV 1, GP B, C, D; DIP CL II, DIV 1, GP E, F, G; CL III; T5(-40 °C ≤ T_a ≤ +85 °C); Factory Sealed; Type 4X
- I5** USA Intrinsic Safety (IS) and Nonincendive (NI)
 Certificate: 1015441
 Standards: FM Class 3600 - 2011, FM Class 3610 - 2010, FM Class 3611 - 2004, FM Class 3810 - 2005
 Markings: IS CL I, DIV 1, GP A, B, C, D; CL II, DIV 1, GP E, F, G; Class III; DIV 1 when connected per Rosemount drawing 02088-1024; NI CL 1, DIV 2, GP A, B, C, D; T4(-50 °C ≤ T_a ≤ +70 °C); Type 4x
- C6** Canada Explosionproof, Intrinsic Safety and Division 2, Dust-Ignitionproof
 Certificate: 1015441
 Standards: CAN/CSA C22.2 No. 0-M91 (R2001), CSA Std C22.2 No. 25-1966, CSA Std C22.2 No. 30-M1986, CAN/CSA-C22.2 No. 94-M91, CSA Std C22.2 No. 142-M1987, CAN/CSA-C22.2 No. 157-92, CSA Std C22.2 No. 213-M1987, ANSI-ISA-12.27.01-2003
 Markings: Explosionproof for Class I, Division 1, Groups B, C and D; Class II, Groups E, F, and G; Class III; Intrinsically Safe Class I, Division 1 when connected in accordance with Rosemount drawing 02088-1024, Temperature Code T3C; Ex ia; Class I Division 2 Groups A, B, C and D; Type 4X; Factory Sealed; Single Seal

Europe

- ED** ATEX Flameproof
 Certificate: KEMA97ATEX2378X
 Standards: EN60079-0:2012 + A11:2013, EN60079-1:2014, EN60079-26:2015
 Markings:  II 1/2 G Ex db IIC T6...T4 Ga/Gb, T6(-60 °C ≤ T_a ≤ +70 °C), T4/T5(-60 °C ≤ T_a ≤ +80 °C);

Special Conditions for Safe Use (X):

1. This device contains a thin wall diaphragm. Installation, maintenance and use shall take into account the environmental conditions to which the diaphragm will be subjected. The manufacturer's instructions for installation and maintenance shall be followed in detail to assure safety during its expected lifetime.
2. Flameproof joints are not intended for repair.
3. Non-standard paint options may cause risk from electrostatic discharge. Avoid installations that could cause electrostatic build-up on painted surfaces, and only clean the painted surfaces with a damp cloth. If paint is ordered through a special option code, contact the manufacturer for more information.

I1 ATEX Intrinsic Safety

Certificate: BAS00ATEX1166X

Standards: EN60079-0:2012 + A11:2013, EN60079-11:2012

Markings: Ex II 1 G Ex ia IIC T4 Ga (-55 °C ≤ T_a ≤ +70 °C)**Table 12. Input Parameters**

Parameters	HART
Voltage U _i	30 V
Current I _i	200 mA
Power P _i	0.9 W
Capacitance C _i	0.012 μF

Special Conditions for Safe Use (X):

1. The apparatus is not capable of withstanding the 500 V insulation test required by EN60079-11. This must be taken into account when installing the apparatus.
2. The enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in a Zone 0 environment.

N1 ATEX Type n

Certificate: BAS00ATEX3167X

Standards: EN60079-0:2012 + A11:2013, EN60079-15:2010

Markings: Ex II 3 G Ex nA IIC T5 Gc (-40 °C ≤ T_a ≤ +70 °C)**Special Condition for Safe Use (X):**

1. This apparatus is not capable of withstanding the 500 V insulation test required by EN60079-15. This must be taken into account when installing the apparatus.

ND ATEX Dust

Certificate: BAS01ATEX1427X

Standards: EN60079-0:2012 + A11:2013, EN60079-31:2009

Markings: Ex II 1 D Ex t IIIC T50 °C T₅₀₀ 60 °C Da**Special Conditions for Safe Use (X):**

1. Cable entries must be used which maintain the ingress protection of the enclosure to at least IP66.
2. Unused cable entries must be filled with suitable blanking plugs which maintain the ingress protection of the enclosure to at least IP66.
3. Cable entries and blanking plugs must be suitable for the ambient range of the apparatus and capable of withstanding a 7 J impact test.

International

E7 IECEx Flameproof

Certificate: IECEx KEM 06.0021X

Standards: IEC 60079-0:2011, IEC60079-1:2014, IEC60079-26:2014

Markings: Ex db IIC T6...T4 Ga/Gb, T6(-60 °C ≤ T_a ≤ +70 °C), T4/T5(-60 °C ≤ T_a ≤ +80 °C)

Special Conditions for Safe Use (X):

1. This device contains a thin wall diaphragm. Installation, maintenance and use shall take into account the environmental conditions to which the diaphragm will be subjected. The manufacturer's instructions for installation and maintenance shall be followed in detail to assure safety during its expected lifetime.
2. Flameproof joints are not intended for repair.
3. Non-standard paint options may cause risk from electrostatic discharge. Avoid installations that could cause electrostatic build-up on painted surfaces, and only clean the painted surfaces with a damp cloth. If paint is ordered through a special option code, contact the manufacturer for more information.

I7 IECEx Intrinsic Safety

Certificate: IECEx BAS 12.0071X

Standards: IEC60079-0:2011, IEC60079-11:2011

Markings: Ex ia IIC T4 Ga (-55 °C ≤ T_a ≤ +70 °C)

Table 13. Input Parameters

Parameter	HART
Voltage U _i	30 V
Current I _i	200 mA
Power P _i	0.9 W
Capacitance C _i	0.012 μF

Special Conditions for Safe Use (X):

1. When fitted with a transient suppression terminal block, the Rosemount 2088 is incapable of passing the 500 V isolation test. This must be taken into account during installation.
2. The enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in a Zone 0 environment.

N7 IECEx Type n

Certificate: IECEx BAS 12.0072X

Standards: IEC60079-0:2011, IEC60079-15:2010

Markings: Ex nA IIC T5 Gc (-40 °C ≤ T_a ≤ +70 °C)

Special Condition for Safe Use (X):

1. When fitted with a transient suppression terminal block, the Rosemount 2088 is incapable of passing the 500 V isolation test. This must be taken into account during installation.

NK IECEx Dust

Certificate: IECEx BAS12.0073X

Standards: IEC60079-0:2011, IEC60079-31:2008

Markings: Ex t IIIC T50 °C T₅₀₀ 60 °C Da

Table 14. Input Parameters

Parameter	HART
Voltage U_i	36 V

Special Conditions for Safe Use (X):

1. Cable entries must be used which maintain the ingress protection of the enclosure to at least IP66.
2. Unused cable entries must be filled with suitable blanking plugs which maintain the ingress protection of the enclosure to at least IP66.
3. Cable entries and blanking plugs must be suitable for the ambient temperature range of the apparatus and capable of withstanding a 7 J impact test.

Brazil**E2 INMETRO Flameproof**

Certificate: UL-BR 15.0728X

Standards: ABNT NBR IEC60079-0:2008 + Errata 1:2011,
ABNT NBR IEC 60079-1:2009 + Errata 1:2011,
ABNT NBR IEC 60079-26:2008 + Errata 1:2008Markings: Ex db IIC T6...T4 Ga/Gb, T4/T5(-60 °C ≤ T_a ≤ +80 °C), T6(-60 °C ≤ T_a ≤ +70 °C)**Special Conditions for Safe Use (X):**

1. This device contains a thin wall diaphragm less than 1mm thickness that forms a boundary between zone 0 (process connection) and zone 1 (all other parts of the equipment). The model code and datasheet are to be consulted for details of the diaphragm material. Installations, maintenance and use shall take into account the environmental conditions to which the diaphragm will be subjected. The manufacturer's instructions for installation and maintenance shall be followed in detail to assure safety during its expected lifetime.
2. Flameproof joints are not intended for repair.
3. Non-standard paint options may cause risk from electrostatic discharge. Avoid installations that could cause electrostatic build-up on painted surfaces, and only clean the painted surfaces with a damp cloth. If paint is ordered through a special option code, contact the manufacturer for more information.

I2 INMETRO Intrinsic Safety

Certificate: UL-BR 13.0246X

Standards: ABNT NBR IEC60079-0:2008 + Errata 1:2011, ABNT NBR IEC60079-11:2009

Markings: Ex ia IIC T4 Ga (-55 °C ≤ T_a ≤ +70 °C)**Table 15. Input Parameters**

Parameter	HART
Voltage U_i	30 V
Current I_i	200 mA
Power P_i	0.9 W
Capacitance C_i	0.012 μF

Special Conditions for Safe Use (X):

1. When fitted with a transient suppression terminal block, the Rosemount 2088 is incapable of passing the 500 V isolation test. This must be taken into account when installing the equipment.

- The enclosure may be made of aluminum alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in Zone 0.

China

E3 China Flameproof

Certificate: GYJ15.1505

Standards: GB3836.1-2010, GB3836.2-2010

Markings: Ex d IIC T6/T4 Gb, T6($-20\text{ }^{\circ}\text{C} \leq T_a \leq +40\text{ }^{\circ}\text{C}$), T4($-20\text{ }^{\circ}\text{C} \leq T_a \leq +80\text{ }^{\circ}\text{C}$)

Special Conditions of Use (X):

- The ambient temperature is as follows:

T_a	Temperature class
$-20\text{ }^{\circ}\text{C} \leq T_a \leq 80\text{ }^{\circ}\text{C}$	T4
$-20\text{ }^{\circ}\text{C} \leq T_a \leq 40\text{ }^{\circ}\text{C}$	T6

- The earth connection facility on the enclosure should be connected reliably.
- During installation in hazardous location, cable glands, conduits, and blanking plugs, certified by state-appointed inspection bodies with Ex d IIC type of protection, should be used.
- During installation, use and maintenance in explosive gas atmospheres, observe the warning "Do not open when energized."
- During installation, there should be no mixture harm to flameproof housing.
- End user is not permitted to change any components insides, but to settle the problem in conjunction with manufacturer to avoid damage to the product.
- Maintenance should be done in non-hazardous location.
- During installation, use and maintenance of this product, observe the following standards: GB3836.13-2013, GB3836.15-2000, GB3836.16-2006, GB50257-2014

I3 China Intrinsic Safety

Certificate: GYJ15.1507

Standards: GB3836.1-2010, GB3836.4-2010, GB3836.20-2010

Markings: Ex ia IIC T4 Ga

Special Conditions for Safe Use (X):

- The enclosure may contain light metal, attention should be taken to avoid ignition hazard due to impact or friction when used in Zone 0.
- When transient protection board is chosen (option code T1), this apparatus is not capable of withstanding the 500V r.m.s insulation test required by Clause 6.3.12 of GB3836.4-2010.

N3 China Type n

Certificate: GYJ15.1108X

Standards: GB3836.1-2000, GB3836.8-2003

Markings: Ex nA IIC T5 Gc ($-40\text{ }^{\circ}\text{C} \leq T_a \leq +70\text{ }^{\circ}\text{C}$)

Special Condition for Safe Use (X):

- When transient protection board is chosen (option code T1), this apparatus is not capable of withstanding the 500 V r.m.s insulation test required by Clause 6.3.12 of GB3836.4-2010.

Korea

- EP** Korea Flameproof
 Certificate: 13-KB4BO-0020X
 Markings: Ex d IIC T6...T4, T4/T5(-60 °C ≤ T_a ≤ +80 °C), T6(-60 °C ≤ T_a ≤ +70 °C)
Special Condition for Safe Use (X):
 1. See certificate for special conditions.

Japan

- E4** Japan Flameproof
 Certificate: TC20869, TC20870
 Markings: Ex d IIC T5

Technical Regulations Customs Union (EAC)

- EM** EAC Flameproof
 Certificate: RU C-US.GB05.B.01197
 Markings: Ga/Gb Ex d IIC T4/T6 X, T4(-40 °C ≤ T_a ≤ +80 °C), T6(-40 °C ≤ T_a ≤ +40 °C)
Special Condition for Safe Use (X):
 1. See certificate for special conditions.

- IM** EAC Intrinsically Safe
 Certificate: RU C-US.GB05.B.01197
 Markings: 0Ex ia IIC T4 Ga X, T4(-55 °C ≤ T_a ≤ +70 °C)
Special Condition for Safe Use (X):
 1. See certificate for special conditions.

Combinations

- K1** Combination of ED, I1, ND, and N1
K2 Combination of E2 and I2
K5 Combination of E5 and I5
K6 Combination of C6, ED, and I1
K7 Combination of E7, I7, NK, and N7
KB Combination of K5 and C6
KM Combination of EM and IM
KH Combination of ED, I1, K5

Conduit Plugs and Adapters

IECEx Flameproof and Increased Safety
 Certificate: IECEx FMG 13.0032X
 Standards: IEC60079-0:2011, IEC60079-1:2007-04, IEC60079-7:2006-07
 Markings: Ex de IIC Gb

ATEX Flameproof and Increased Safety
 Certificate: FM13ATEX0076X
 Standards: EN60079-0:2012, EN60079-1:2007, EN60079-7:2007
 Markings: Ex II 2 G Ex de IIC Gb

Table 16. Conduit Plug Thread Sizes

Thread	Identification mark
M20 x 1.5–6g	M20
1/2–14 NPT	1/2 NPT
G ¹ /2A	G ¹ /2

Table 17. Thread Adapter Thread Sizes

Male thread	Identification mark
M20 x 1.5–6H	M20
1/2–14 NPT	1/2–14 NPT
3/4–14 NPT	3/4–14 NPT
Female thread	Identification mark
M20 x 1.5–6H	M20
1/2–14 NPT	1/2–14 NPT
G ¹ /2	G ¹ /2

Special Conditions for Safe Use (X):

1. When the thread adapter or blanking plug is used with an enclosure in type of protection increased safety “e” the entry thread shall be suitably sealed in order to maintain the ingress protection rating (IP) of the enclosure.
2. The blanking plug shall not be used with an adapter.
3. Blanking Plug and Threaded Adapter shall be either NPT or Metric thread forms. G¹/2 thread forms are only acceptable for existing (legacy) equipment installations.

Additional Certifications

- SBS** American Bureau of Shipping (ABS) Type Approval
 Certificate: 09-HS446883D-3-PDA
 Intended Use: Measurement of either gauge or absolute pressure for liquid, gas, and vapor
 ABS Rules: 2014 Steel Vessels Rules 1-1-4/7.7, 1-1-Appendix 3, 4-8-3/1.7, 4-8-3/13.1, 4-8-3/13.3.1 & 13.3.2, 4-8-4/27.5.1
- SBV** Bureau Veritas (BV) Type Approval
 Certificate: 23156/B0 BV
 Requirements: Bureau Veritas Rules for the Classification of Steel Ships
 Application: Class notations: AUT-UMS, AUT-CCS, AUT-PORT, and AUT-IMS;
 Pressure transmitter type 2088 cannot be installed on diesel engines.
- SDN** Det Norske Veritas (DNV) Type Approval
 Certificate: TAA000004F
 Intended Use: DNV GL Rules for Classification - Ships and offshore units
 Application:

Location classes	
Temperature	D
Humidity	B
Vibration	A

EMC	B
Enclosure	D

- SLL** Lloyds Register (LR) Type Approval
Certificate: 11/60002
Application: Environmental categories ENV1, ENV2, ENV3, and ENV5

Figure 13. Rosemount 2088 and 2090 Declaration of Conformity

	<h2>EU Declaration of Conformity</h2> <p>No: RMD 1010 Rev. L</p>	
<p>We,</p>		
<p>Rosemount, Inc. 8200 Market Boulevard Chanhassen, MN 55317-9685 USA</p>		
<p>declare under our sole responsibility that the product,</p>		
<p>Rosemount Pressure Transmitters 3051P, 2051G, 2088, and 2090</p>		
<p>manufactured by,</p>		
<p>Rosemount, Inc. 8200 Market Boulevard Chanhassen, MN 55317-9685 USA</p>		
<p>to which this declaration relates, is in conformity with the provisions of the European Union Directives, including the latest amendments, as shown in the attached schedule.</p>		
<p>Assumption of conformity is based on the application of the harmonized standards and, when applicable or required, a European Union notified body certification, as shown in the attached schedule.</p>		
	<p>Vice President of Global Quality (function)</p>	
<p>Chris LaPoint (name)</p>	<p>03-Apr-2017 (date of issue)</p>	
<p>Page 1 of 3</p>		



EU Declaration of Conformity



No: RMD 1010 Rev. L

EMC Directive (2014/30/EU)

Harmonized Standards: EN 61326-1:2013, EN 61326-2-3:2013

ATEX Directive (2014/34/EU)

BAS00ATEX1166X - Intrinsic Safety Certificate

Equipment Group II Category 1 G

Ex ia IIC T4 Ga

Harmonized Standards:

EN60079-0:2012 + A11:2013, EN60079-11:2012

BAS00ATEX3167X - Type n Certificate

Equipment Group II Category 3 G

Ex nA IIC T5 Gc

Harmonized Standards:

EN60079-0:2012 + A11:2013, EN60079-15:2010

BAS01ATEX1427X - Dust Certificate

Equipment Group II Category 1 D

Ex t IIIC T50°C T₅₀₀60°C Da

Harmonized Standards:

EN60079-0:2012 + A11:2013

Other Standards:

EN60079-31:2009

(A review against EN60079-31:2014 which is harmonized, shows no significant changes relevant to this equipment so EN60079-31:2009 continues to represent "State of the Art".)

KEMA97ATEX2378X - Flameproof Certificate

Equipment Group II Category 1/2 G

Ex db IIC T6...T4 Ga/Gb

Harmonized Standards:

EN 60079-0:2012 + A11:2013; EN60079-1:2014; EN60079-26:2015



EU Declaration of Conformity



No: RMD 1010 Rev. L

ATEX Notified Bodies

DEKRA (KEMA) [Notified Body Number: 0344]
Utrechtseweg 310, 6812 AR Arnhem
P.O. Box 5185, 6802 ED Arnhem
The Netherlands
Postbank 6794687

SGS Baseefa Limited [Notified Body Number: 1180]
Rockhead Business Park
Staden Lane
Buxton, Derbyshire
SK17 9RZ United Kingdom

ATEX Notified Body for Quality Assurance

SGS Baseefa Limited [Notified Body Number: 1180]
Rockhead Business Park Staden Lane
SK17 9RZ Buxton
United Kingdom

含有China RoHS管控物质超过最大浓度限值的部件型号列表 Rosemount 2088, 2090F, and 2090
List of Rosemount 2088, 2090F, and 2090 Parts with China RoHS Concentration above MCVs

部件名称 Part Name	有害物质 / Hazardous Substances					
	铅 Lead (Pb)	汞 Mercury (Hg)	镉 Cadmium (Cd)	六价铬 Hexavalent Chromium (Cr +6)	多溴联苯 Polybrominated biphenyls (PBB)	多溴联苯醚 Polybrominated diphenyl ethers (PBDE)
电子组件 Electronics Assembly	X	O	O	O	O	O
壳体组件 Housing Assembly	X	O	O	X	O	O
传感器组件 Sensor Assembly	X	O	O	X	O	O

本表格系依据SJ/T11364的规定而制作。

This table is proposed in accordance with the provision of SJ/T11364.

O: 意为该部件的所有均质材料中该有害物质的含量均低于GB/T 26572所规定的限量要求。

O: Indicate that said hazardous substance in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.

X: 意为在该部件所使用的所有均质材料里，至少有一类均质材料中该有害物质的含量高于GB/T 26572所规定的限量要求。

X: Indicate that said hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T 26572.



Global Headquarters

Emerson Automation Solutions
6021 Innovation Blvd.
Shakopee, MN 55379, USA
+1 800 999 9307 or +1 952 906 8888
+1 952 949 7001
RFQ.RMD-RCC@Emerson.com

North America Regional Office

Emerson Automation Solutions
8200 Market Blvd.
Chanhassen, MN 55317, USA
+1 800 999 9307 or +1 952 906 8888
+1 952 949 7001
RMT-NA.RCCRFQ@Emerson.com

Latin America Regional Office

Emerson Automation Solutions
1300 Concord Terrace, Suite 400
Sunrise, FL 33323, USA
+1 954 846 5030
+1 954 846 5121
RFQ.RMD-RCC@Emerson.com

Europe Regional Office

Emerson Automation Solutions
Neuhofstrasse 19a P.O. Box 1046
CH 6340 Baar
Switzerland
+41 (0) 41 768 6111
+41 (0) 41 768 6300
RFQ.RMD-RCC@Emerson.com

Asia Pacific Regional Office

Emerson Automation Solutions
1 Pandan Crescent
Singapore 128461
+65 6777 8211
+65 6777 0947
Enquiries@AP.Emerson.com

Middle East and Africa Regional Office

Emerson Automation Solutions
Emerson FZE P.O. Box 17033
Jebel Ali Free Zone - South 2
Dubai, United Arab Emirates
+971 4 8118100
+971 4 8865465
RFQ.RMTMEA@Emerson.com



[Linkedin.com/company/Emerson-Automation-Solutions](https://www.linkedin.com/company/Emerson-Automation-Solutions)



[Twitter.com/Rosemount_News](https://twitter.com/Rosemount_News)



[Facebook.com/Rosemount](https://www.facebook.com/Rosemount)



[Youtube.com/user/RosemountMeasurement](https://www.youtube.com/user/RosemountMeasurement)



[Google.com/+RosemountMeasurement](https://www.google.com/+RosemountMeasurement)

Emerson Terms and Conditions of Sale are available upon request
The Emerson logo is a trademark and service mark of Emerson Electric Co.

Rosemount and Rosemount logotype are trademarks of Emerson.
DTM is a trademark of the FDT Group.

HART is a registered trademark of the FieldComm Group.

Tri-Clamp is a registered trademark of Alfa Laval Corp., Sweden.

NEMA is a registered trademark and service mark of the National Electrical Manufacturers Association.

All other marks are the property of their respective owners.

© 2018 Emerson. All rights reserved.